

4. Aluminum Wheel S204130

A: REMOVAL S204130A18

Refer to Steel Wheel for removal procedure of aluminum wheels. <Ref. to WT-5 REMOVAL, Steel Wheel.>

B: INSTALLATION A204130A11

Refer to Steel Wheel for installation procedure of aluminum wheels. <Ref. to WT-5 INSTALLATION, Steel Wheel.>

C: INSPECTION S204130A10

Refer to Steel Wheel for inspection procedure of aluminum wheels. <Ref. to WT-5 INSPECTION, Steel Wheel.>

Rim runout:

Axial runout limit	Radial runout limit
1.0 mm (0.039 in)	

D: CAUTION S204130A03

Aluminum wheels are easily scratched. To maintain their appearance and safety, do the following:

- Do not damage aluminum wheels during removal, disassembly, installation, wheel balancing, etc. After removing aluminum wheels, place them on a rubber mat, etc.
- While vehicle is being driven, be careful not to ride over sharp obstacles or allow aluminum wheels to contact the shoulder of the road.
- When installing tire chain, be sure to install it properly not to have a slack; otherwise it may hit wheel while driving.
- When washing aluminum wheel, use neutral synthetic detergent and water. Avoid using the cleanser including abrasive, hard brushes or an automatic car washer.