


## 7. Full Wheel Cap S204128

### A: REMOVAL S204128A18

Pry off the full wheel cap with a wheel cap remover inserted between openings in the cap.

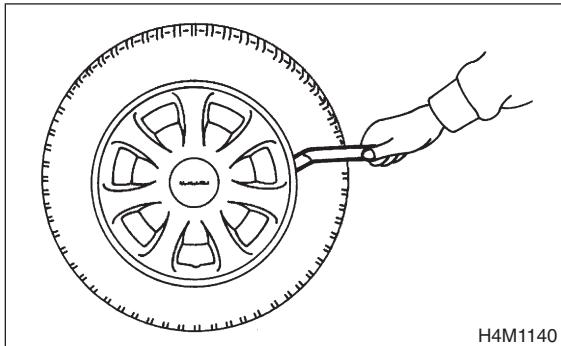

H4M1140

### B: INSTALLATION S204128A11

Align the valve hole in the wheel cap with the valve on the wheel and secure the wheel cap by tapping four points by hand.

### C: INSPECTION S204128A10

- 1) Check wheels for missing wheel caps.
- 2) Check pawls of wheel caps for damage or bend.
- 3) Check wheel caps for cracks.

# **FULL WHEEL CAP**

Wheel and Tire System

---

**MEMO:**