


BASIC DIAGNOSTIC PROCEDURE

Automatic Transmission

1. Basic Diagnostic Procedure

S004501

A: PROCEDURE S004501E45

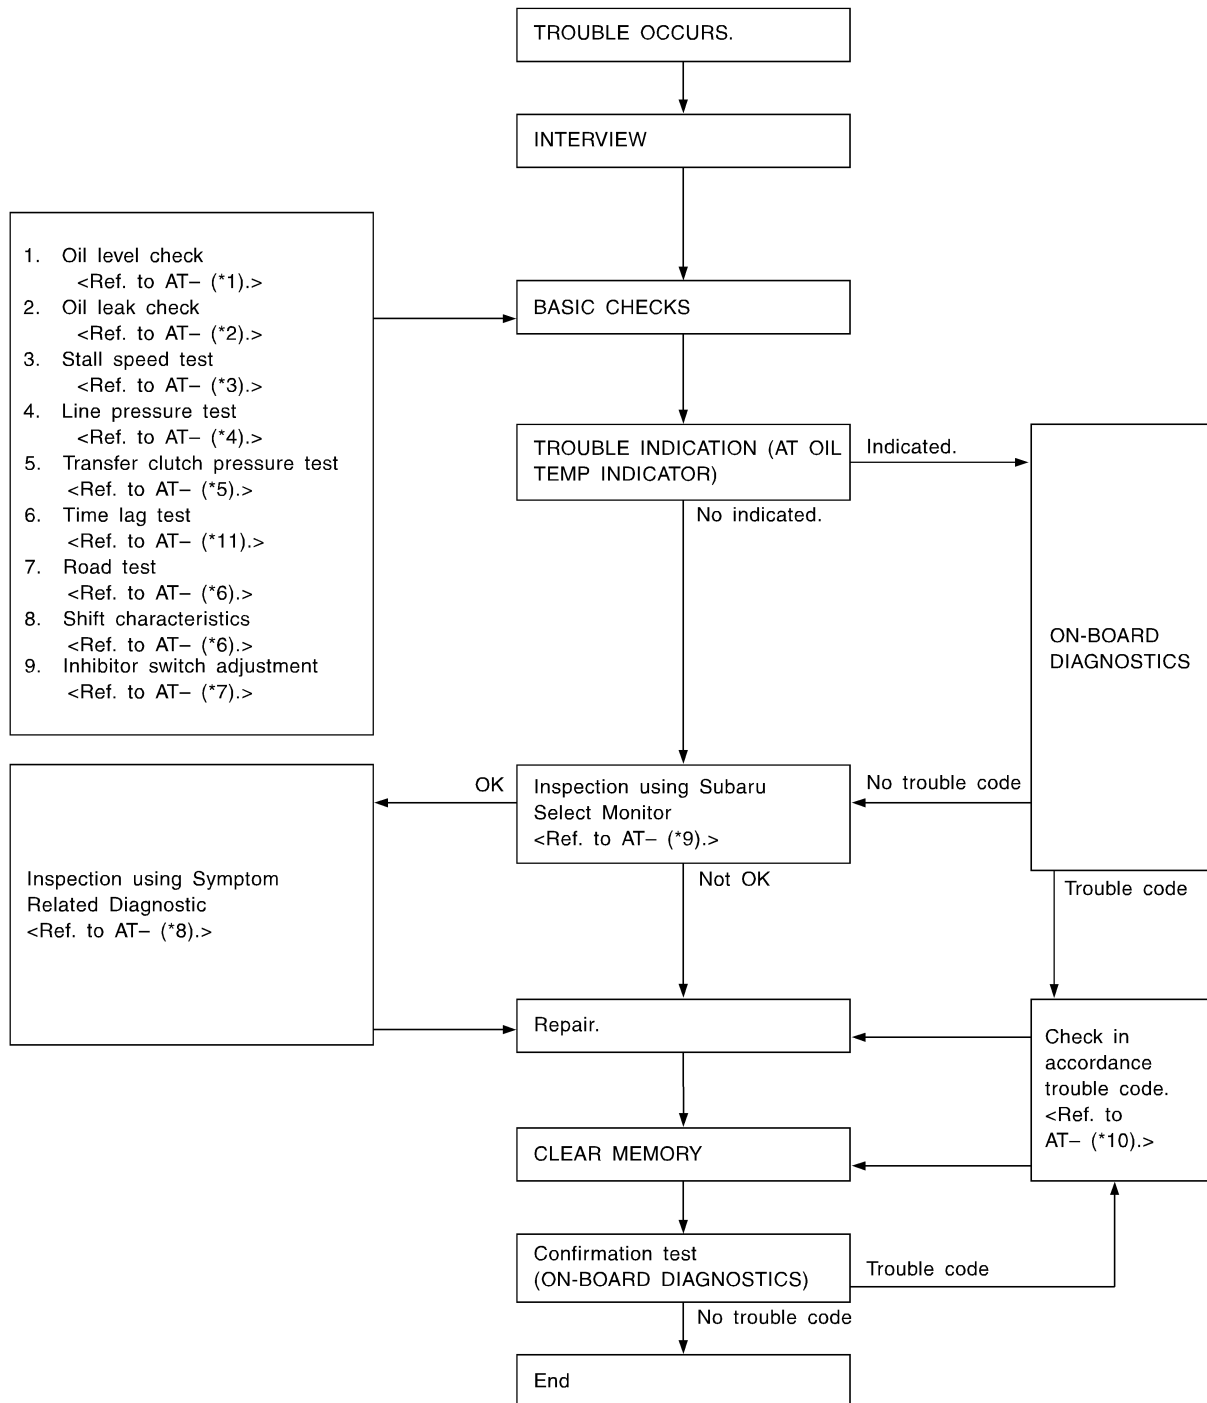

H3M1672I

BASIC DIAGNOSTIC PROCEDURE

Automatic Transmission

-
- | | | |
|---|---|--|
| *1: <Ref. to AT-5 INSPECTION,
General Description.> | *5: <Ref. to AT-17 INSPECTION,
Transfer Clutch Pressure Test.> | *9: <Ref. to AT-16 OPERATION,
Subaru Select Monitor.> |
| *2: <Ref. to AT-11 INSPECTION,
Road Test.> | *6: <Ref. to AT-11 INSPECTION,
Road Test.> | *10: <Ref. to AT-23 LIST, List of diag-
nostic Trouble Code.> |
| *3: <Ref. to AT-12 INSPECTION,
Stall Test.> | *7: <Ref. to AT-30 ADJUSTMENT,
Inhibitor Switch.> | *11: <Ref. to AT-14 INSPECTION,
Time Lag Test.> |
| *4: <Ref. to AT-15 MEASUREMENT,
Line Pressure Test.> | *8: <Ref. to AT-93 INSPECTION,
symptom Related Diagnostic.> | |