

## 10. Clear Memory Mode S004513

### A: OPERATION S004513A16

#### 1. WITHOUT SUBARU SELECT MONITOR

S004513A1602

Current trouble codes shown on the display are cleared by turning the ignition switch OFF after conducting on-board diagnostics operation. Previous trouble codes, however, cannot be cleared since they are stored in the TCM memory which is operating on the back-up power supply. These trouble codes can be cleared by removing the specified fuse (located under the light or left lower position of the instrument panel).

##### **CLEAR MEMORY:**

###### ***Removal of No. 4 fuse (for at least one minute)***

- The No. 4 fuse is located in the line to the memory back-up power supply of the TCM. Removal of this fuse clears the previous trouble codes stored in the TCM memory.
- Be sure to remove the No. 4 fuse for at least the specified length of time. Otherwise, trouble codes may not be cleared.

#### 2. WITH SUBARU SELECT MONITOR

S004513A1601

Refer to SUBARU SELECT MONITOR for information about how to clear trouble codes.

<Ref. to AT-16 OPERATION, Subaru Select Monitor.>