


8. Read Diagnostic Trouble Code

S004508

A: OPERATION S004508A16

1. WITHOUT SUBARU SELECT MONITOR S004508A1601

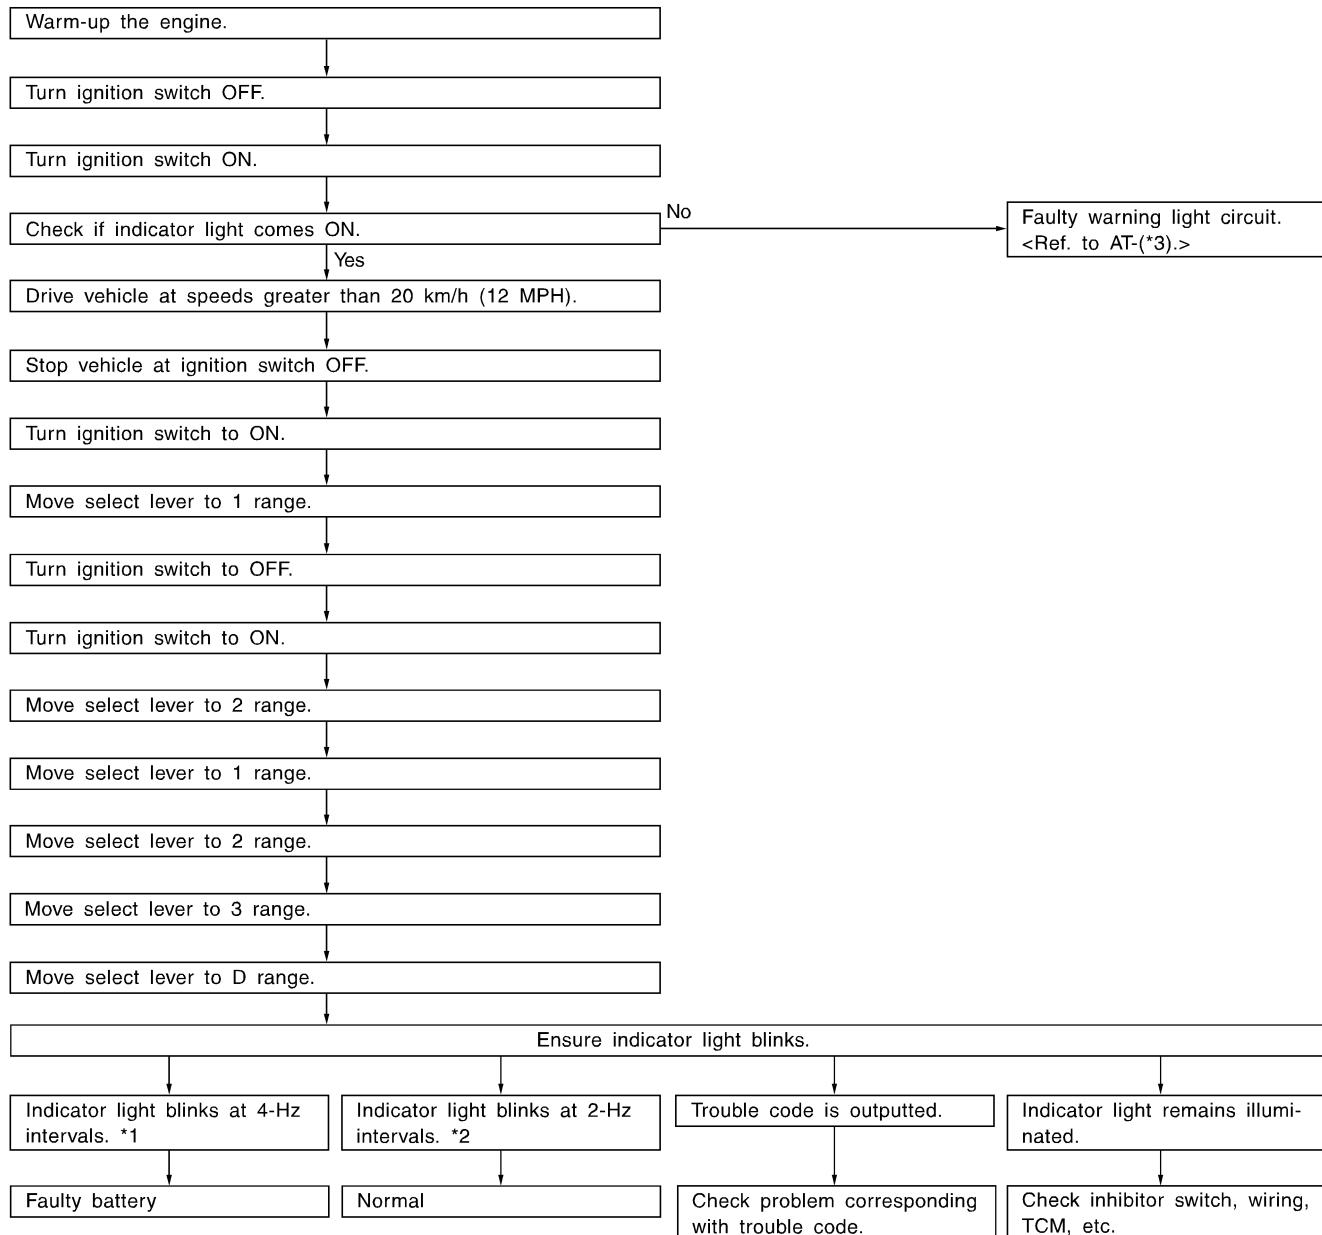

*1 : Blinks every 0.125 (1/8) seconds (until ignition switch is turned OFF).


*2 : Blinks every 0.25 (1/4) seconds (until ignition switch is turned OFF).

S3M0063C

*3: <Ref. to AT-25 AT OIL TEMP WARNING LIGHT DOES NOT COME ON OR GO OFF, Diagnostic Procedure for AT Oil Temp Warning Light.>

The AT OIL TEMP warning light flashes the code corresponding to the faulty part.

The long segment (1.2 sec on) indicates a "ten", and the short segment (0.2 sec on) signifies a "one".

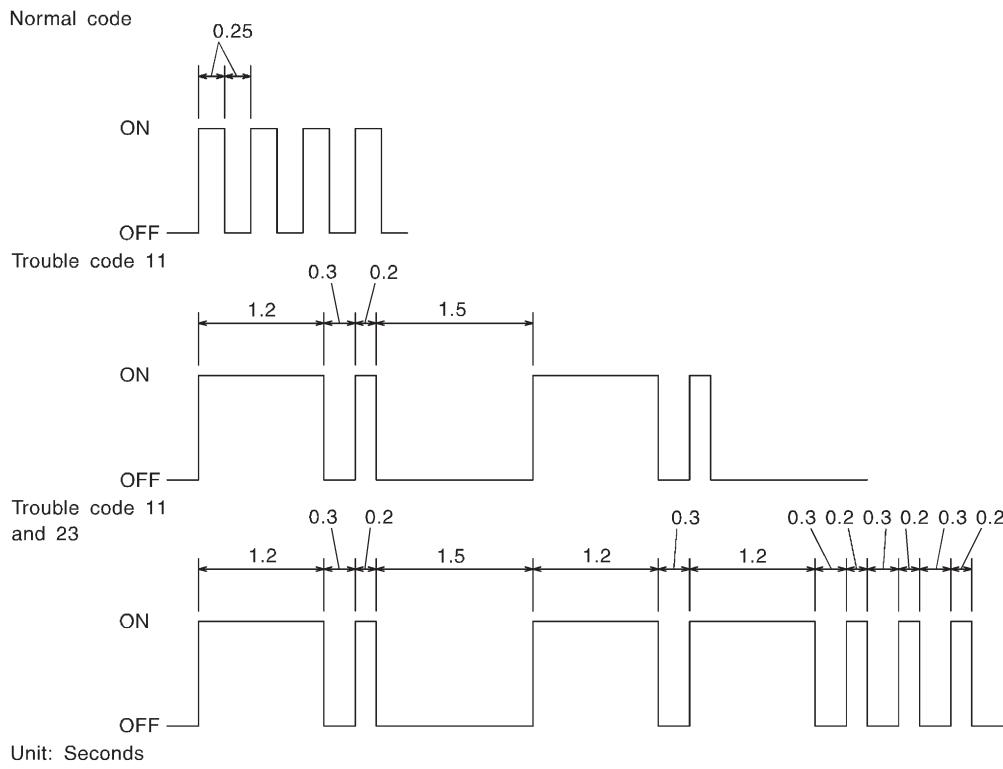

B3M1199A

2. WITH SUBARU SELECT MONITOR

S004508A1602

Refer to SUBARU SELECT MONITOR for information about how to obtain and understand trouble codes. <Ref. to AT-16 OPERATION, Subaru Select Monitor.>