

5. Transmission Control Module (TCM) I/O Signal

S004506

A: ELECTRICAL SPECIFICATION

S004506A08

to (B54)

9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11	10
24	23	22			21	20	19	

to (B55)

9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11	10
24	23	22			21	20	19	

B2M2269A

Check with ignition switch ON.

Content		Connec- tor No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Back-up power supply		B55	6	Ignition switch OFF	10 — 16	—
Ignition power supply		B54	23	Ignition switch ON (with engine OFF)	10 — 16	—
		B54	24			
Inhibitor switch		B55	23	Select lever in "P" range	Less than 1	—
				Select lever in any other than "P" range (except "N" range)	More than 8	
		B55	22	Select lever in "N" range	Less than 1	—
				Select lever in any other than "N" range (except "P" range)	More than 8	
		B55	17	Select lever in "R" range	Less than 1	—
				Select lever in any other than "R" range	More than 9.5	
		B55	8	Select lever in "D" range	Less than 1	—
				Select lever in any other than "D" range	More than 9.5	
		B55	18	Select lever in "3" range	Less than 1	—
				Select lever in any other than "3" range	More than 9.5	
"2" range switch		B54	10	Select lever in "2" range	Less than 1	—
				Select lever in any other than "2" range	More than 9.5	
		B54	1	Select lever in "1" range	Less than 1	—
				Select lever in any other than "1" range	More than 9.5	
Brake switch		B55	24	Brake pedal depressed.	More than 10.5	—
				Brake pedal released.	Less than 1	

TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

Automatic Transmission

Check with ignition switch ON.					
Content	Connec- tor No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
ABS signal	B54	19	ABS switch ON	Less than 1	—
			ABS switch OFF	6.5 — 15	
AT OIL TEMP warning light	B54	3	Light ON	Less than 1	—
			Light OFF	More than 9	
Throttle position sensor	B55	2	Throttle fully closed.	0.3 — 0.7	—
			Throttle fully open.	4.3 — 4.9	
Throttle position sensor power supply	B55	1	Ignition switch ON (With engine OFF)	4.8 — 5.3	—
ATF temperature sensor	B55	11	ATF temperature 20°C (68°F)	2.9 — 4.0	2.1 — 2.9 k
			ATF temperature 80°C (176°F)	0.5 — 0.8	275 — 375
Vehicle speed sensor 1 (Rear)	B55	3	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Vehicle speed sensor 2 (Front)	B55	5	Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range) 4	450 — 650
Torque converter turbine speed sensor	B55	12	Vehicle stopped	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Vehicle speed output signal	B55	13	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Engine speed signal	B55	4	Ignition switch ON (with engine OFF)	More than 10.5	—
			Ignition switch ON (with engine ON)	8 — 11	
Cruise set signal	B54	11	When cruise control is set (SET lamp ON)	Less than 1	—
			When cruise control is not set (SET lamp OFF)	More than 6.5	
Torque control signal 1	B54	13	Ignition switch ON (with engine ON)	4 — 6	—
Torque control signal 2	B54	21	Ignition switch ON (with engine ON)	More than 9	—
Torque control cut signal	B54	2	Ignition switch ON	8	—
Intake manifold pressure signal	B55	20	Engine idling after warm-up.	1.2 — 1.8	—
Shift solenoid 1	B54	7	1st or 4th gear	More than 9	10 — 16
			2nd or 3rd gear	Less than 1	
Shift solenoid 2	B54	6	1st or 2nd gear	More than 9	10 — 16
			3rd or 4th gear	Less than 1	
Line pressure duty solenoid	B54	9	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Dropping resistor	B54	18	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Lock-up duty solenoid	B54	16	When lock up occurs.	More than 8.5	10 — 17
			When lock up is released.	Less than 0.5	

TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL


Automatic Transmission

Check with ignition switch ON.					
Content	Connec-tor No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Transfer duty solenoid	B54	15	Fuse on FWD switch	More than 8.5	10 — 17
			Fuse removed from FWD switch (with throttle fully open and with select lever in 1st gear).	Less than 0.5	
2-4 brake duty solenoid	B54	8	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake dropping resistor	B54	17	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake timing solenoid	B54	5	1st gear	Less than 1	10 — 16
			3rd gear	More than 9	
Low clutch timing solenoid	B54	14	2nd gear	Less than 1	10 — 16
			4th gear	More than 9	
Sensor ground line 1	B55	10	—	0	Less than 1
Sensor ground line 2	B55	21	—	0	Less than 1
System ground line	B55	9	—	0	Less than 1
		19			
FWD switch	B55	14	Fuse removed.	6 — 9.1	—
			Fuse installed.	Less than 1	
FWD indicator light	B54	12	Fuse ON FWD switch	Less than 1	—
			Fuse removed from FWD switch	More than 9	
AT diagnosis signal	B54	4	Ignition switch ON	Less than 1← →More than 4	—
Data link signal (Subaru Select Monitor)	B55	7	—	—	—
		16	—	—	

TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

Automatic Transmission

B: SCHEMATIC S004506A21

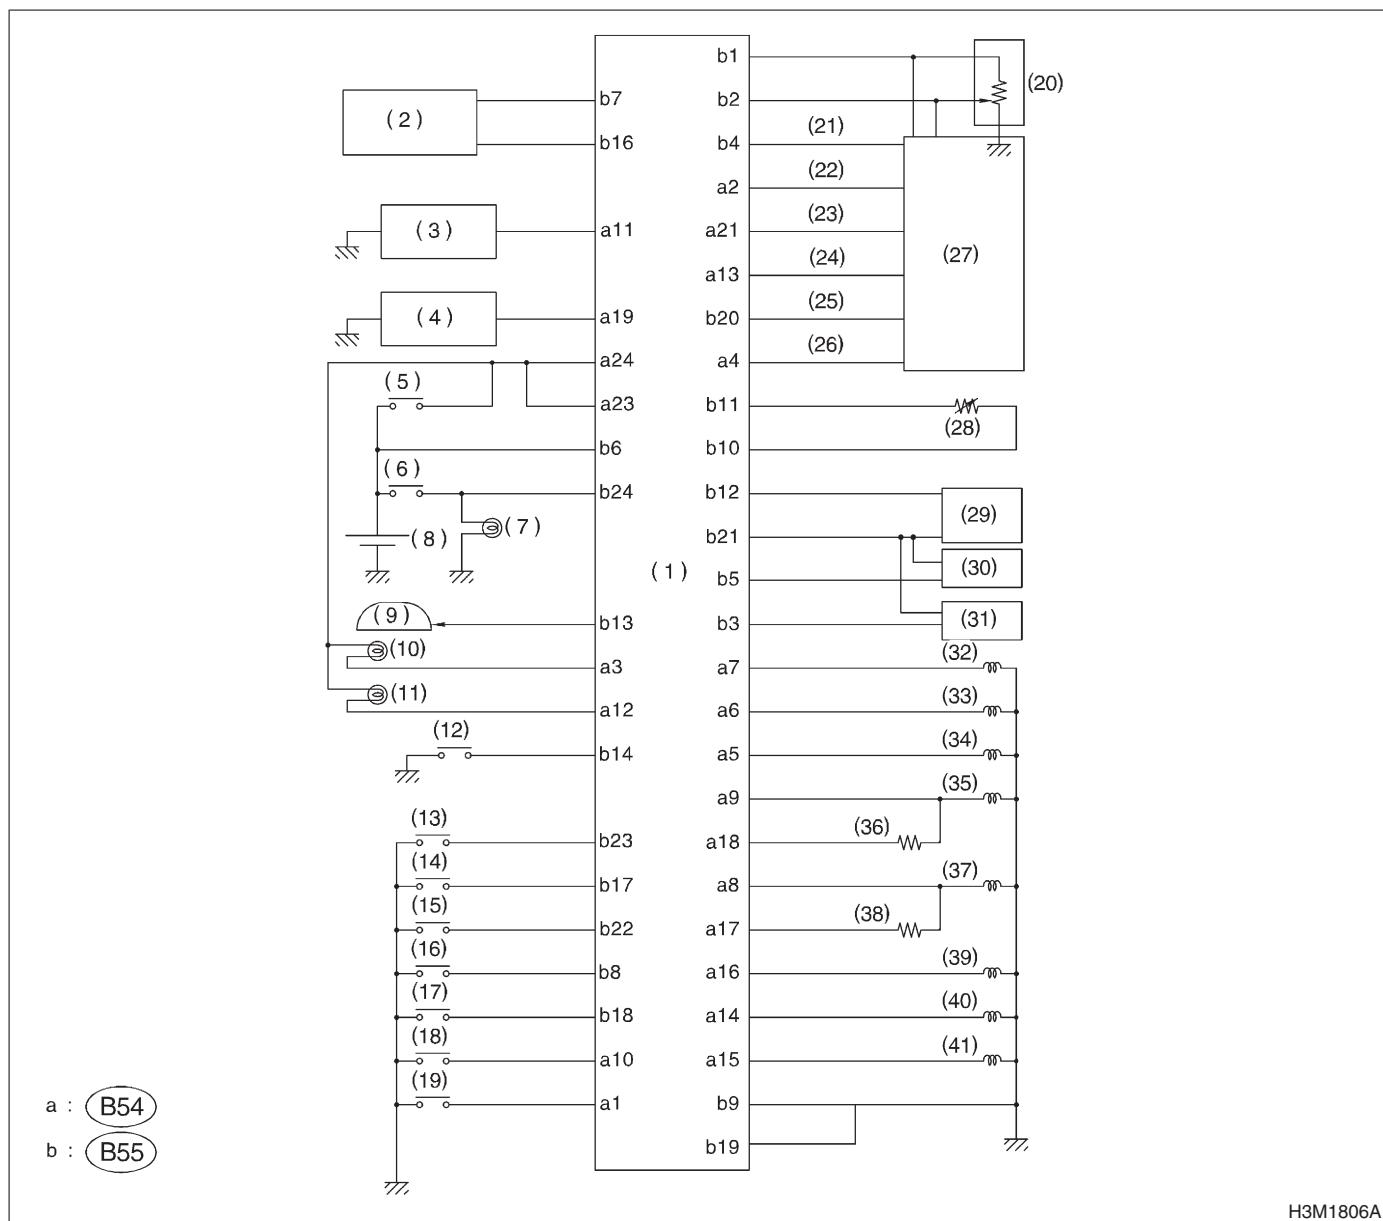

(1) Transmission control module	(17) "3" range switch	(33) Shift solenoid 2
(2) Data link connector	(18) "2" range switch	(34) 2-4 brake timing solenoid
(3) Cruise control module	(19) "1" range switch	(35) Line pressure duty solenoid
(4) ABS control module	(20) Throttle position sensor	(36) Line pressure dropping resistor
(5) Ignition switch	(21) Engine speed signal	(37) 2-4 brake duty solenoid
(6) Brake switch	(22) Torque control cut signal	(38) 2-4 brake dropping resistor
(7) Brake light	(23) Torque control signal 2	(39) Lock-up duty solenoid
(8) Battery	(24) Torque control signal 1	(40) Low clutch timing solenoid
(9) Combination meter (Speedometer circuit)	(25) AT load signal	(41) Transfer duty solenoid
(10) AT OIL TEMP warning light	(26) AT diagnostics signal	
(11) FWD indicator light	(27) Engine control module	
(12) FWD switch	(28) ATF temperature sensor	
(13) "P" range switch	(29) Torque converter turbine speed sensor	
(14) "R" range switch	(30) Vehicle speed sensor 2 (Front)	
(15) "N" range switch	(31) Vehicle speed sensor 1 (Rear)	
(16) "D" range switch	(32) Shift solenoid 1	