



16. Transmission Control Module (TCM) S502225

A: REMOVAL S502225A18


- 1) Disconnect battery ground terminal.

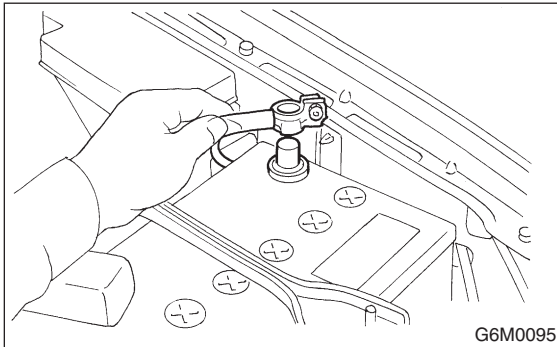

- 2) Remove lower cover and then disconnect connector.

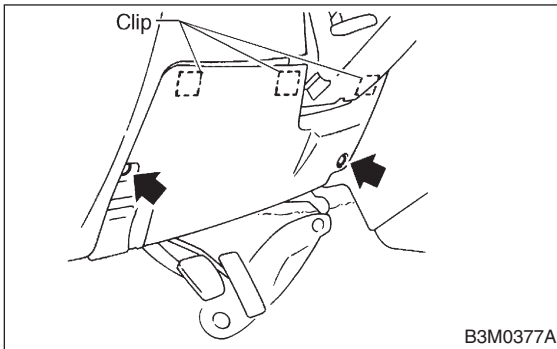

- 3) Disconnect connectors from TCM.
- 4) Remove transmission control module.

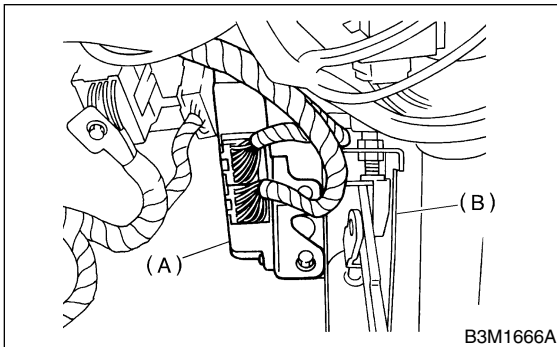


- (A) Transmission control module
(B) Brake pedal bracket

B: INSTALLATION S502225A11

- 1) Install TCM to pedal bracket.

Tightening torque:
7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

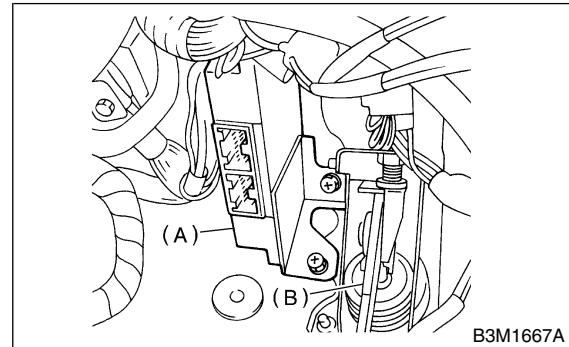

- (A) Transmission control module
(B) Brake pedal bracket

- 2) Connect connectors to TCM.
- 3) Install lower cover and then connect connector.
- 4) Connect battery ground terminal.