

8. Clutch Fluid Air Bleeding


A: PROCEDURE

S504260E45

NOTE:


Bleed air from oil line with the help of a co-worker.

- 1) Remove air chamber.
- 2) Fit one end of a vinyl tube into the air bleeder of operating cylinder and put the other end into a brake fluid container.

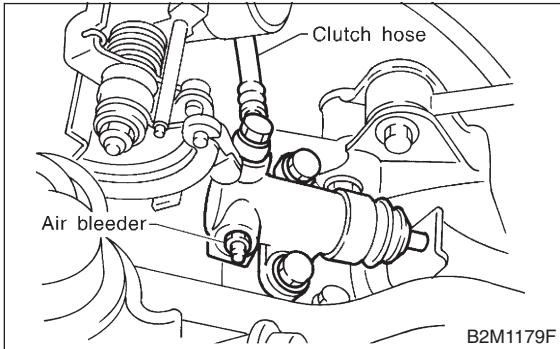

- 3) Slowly depress the clutch pedal and keep it depressed. Then open the air bleeder to discharge air together with the fluid.

Release the air bleeder for 1 or 2 seconds. Next, with the bleeder closed, slowly release the clutch pedal.

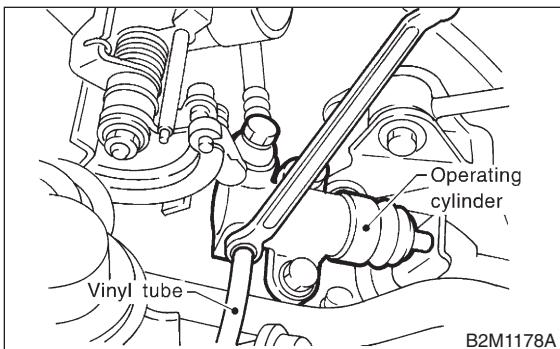

- 4) Repeat these steps until there are no more air bubbles in the vinyl tube.


CAUTION:

Cover bleeder with waste cloth when loosening it, to prevent brake fluid from being splashed over surrounding parts.

- 5) Tighten air bleeder.

Tightening torque:

T: 8 N·m (0.8 kgf-m, 5.8 ft-lb)

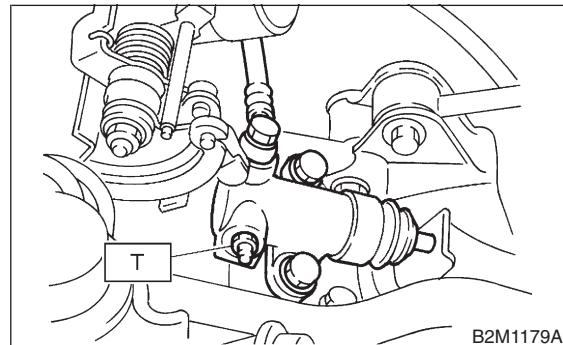

- 6) After depressing the clutch pedal, make sure that there are no leaks evident in the entire system.
- 7) After bleeding air from system, ensure that clutch operates properly.