

11. General Diagnostic Table

S504257

A: INSPECTION S504257A10

Symptom	Possible cause	Corrective action
1. Clutch slippage It is hard to perceive clutch slippage in the early stage, but pay attention to the following symptoms. <ul style="list-style-type: none">• Engine revs up when shifting.• High speed driving is impossible; especially rapid acceleration impossible and vehicle speed does not increase in proportion to an increase in engine speed.• Power falls, particularly when ascending a slope, and there is a smell of burning of the clutch facing.• Method of testing: Put the vehicle in stationary condition with parking brake fully applied. Disengage the clutch and shift the transmission gear into the first. Gradually allow the clutch to engage while gradually increasing the engine speed. The clutch function is satisfactory if the engine stalls. However, the clutch is slipping if the vehicle does not start off and the engine does not stall.	(a) No clutch pedal play (b) No clutch release lever end play (c) Clutch facing smeared by oil (d) Worn clutch facing (e) Deteriorated diaphragm spring (f) Distorted pressure plate or flywheel (g) Defective clutch release bearing holder (h) Defective pedal and cable system	Readjust. Readjust. Replace. Replace. Correct or replace. Correct or replace. Correct or replace.
2. Clutch drags. As a symptom of this trouble, a harsh scratching noise develops and control becomes quite difficult when shifting gears. The symptom becomes more apparent when shifting into the first gear. However, because much trouble of this sort is due to defective synchronization mechanism, carry out the test as described after. <ul style="list-style-type: none">• Method of testing: Refer to "1. DIAGNOSTIC DIAGRAM OF CLUTCH DRAG". It may be judged as insufficient disengagement of clutch if any noise occurs during this test.	(a) Excessive clutch pedal play (b) Excessive clutch release lever play (c) Worn or rusty clutch disc hub spline (d) Excessive deflection of clutch disc facing (e) Seized crankshaft pilot needle bearing (f) Malfunction of pedal and cable system (g) Cracked clutch disc facing (h) Sticked clutch disc (smeared by oil or water)	Readjust. Readjust. Replace clutch disc. Correct or replace. Replace. Correct or replace. Replace.
3. Clutch chatters. Clutch chattering is an unpleasant vibration to the whole body when the vehicle is just started with clutch partially engaged.	(a) Improper clutch cable routing (b) Adhesion of oil on the facing (c) Weak or broken torsion spring (d) Defective facing contact or excessive disc (e) Warped pressure plate or flywheel (f) Loose disc rivets (g) Loose engine mounting (h) Improper adjustment of pitching stopper	Correct. Replace clutch disc. Replace clutch disc. Replace clutch disc deflection. Correct or replace. Replace clutch disc. Retighten or replace mounting. Adjustment.

GENERAL DIAGNOSTIC TABLE

Clutch System


Symptom	Possible cause	Corrective action
4. Noisy clutch Examine whether the noise is generated when the clutch is disengaged, engaged, or partially engaged.	(a) Broken, worn or unlubricated clutch release bearing (b) Insufficient lubrication of pilot bearing (c) Loose clutch disc hub (d) Loose torsion spring retainer (e) Deteriorated or broken torsion spring	Replace clutch release bearing. Apply grease. Replace clutch disc. Replace clutch disc. Replace clutch disc.
5. Clutch grabs. When starting the vehicle with the clutch partially engaged, the clutch engages suddenly and the vehicle jumps instead of making a smooth start.	(a) Grease or oil on facing (b) Deteriorated cushioning spring (c) Worn or rusted spline of clutch disc or main (d) Deteriorated or broken torsion spring (e) Loose engine mounting (f) Deteriorated diaphragm spring	Replace clutch disc. Replace clutch disc. Take off rust, apply grease or replace clutch shaft disc or mainshaft. Replace clutch disc. Retighten or replace mounting. Replace.

Trouble	Corrective action
Insufficient pedal play	Adjust pedal play.
Clutch pedal free play insufficient	Adjust pedal free play.
Excessively worn and damaged pedal shaft and/or bushing	Replace bushing and/or shaft with new one.

GENERAL DIAGNOSTIC TABLE

Clutch System

1. DIAGNOSTIC DIAGRAM OF CLUTCH DRAG S504257A1001

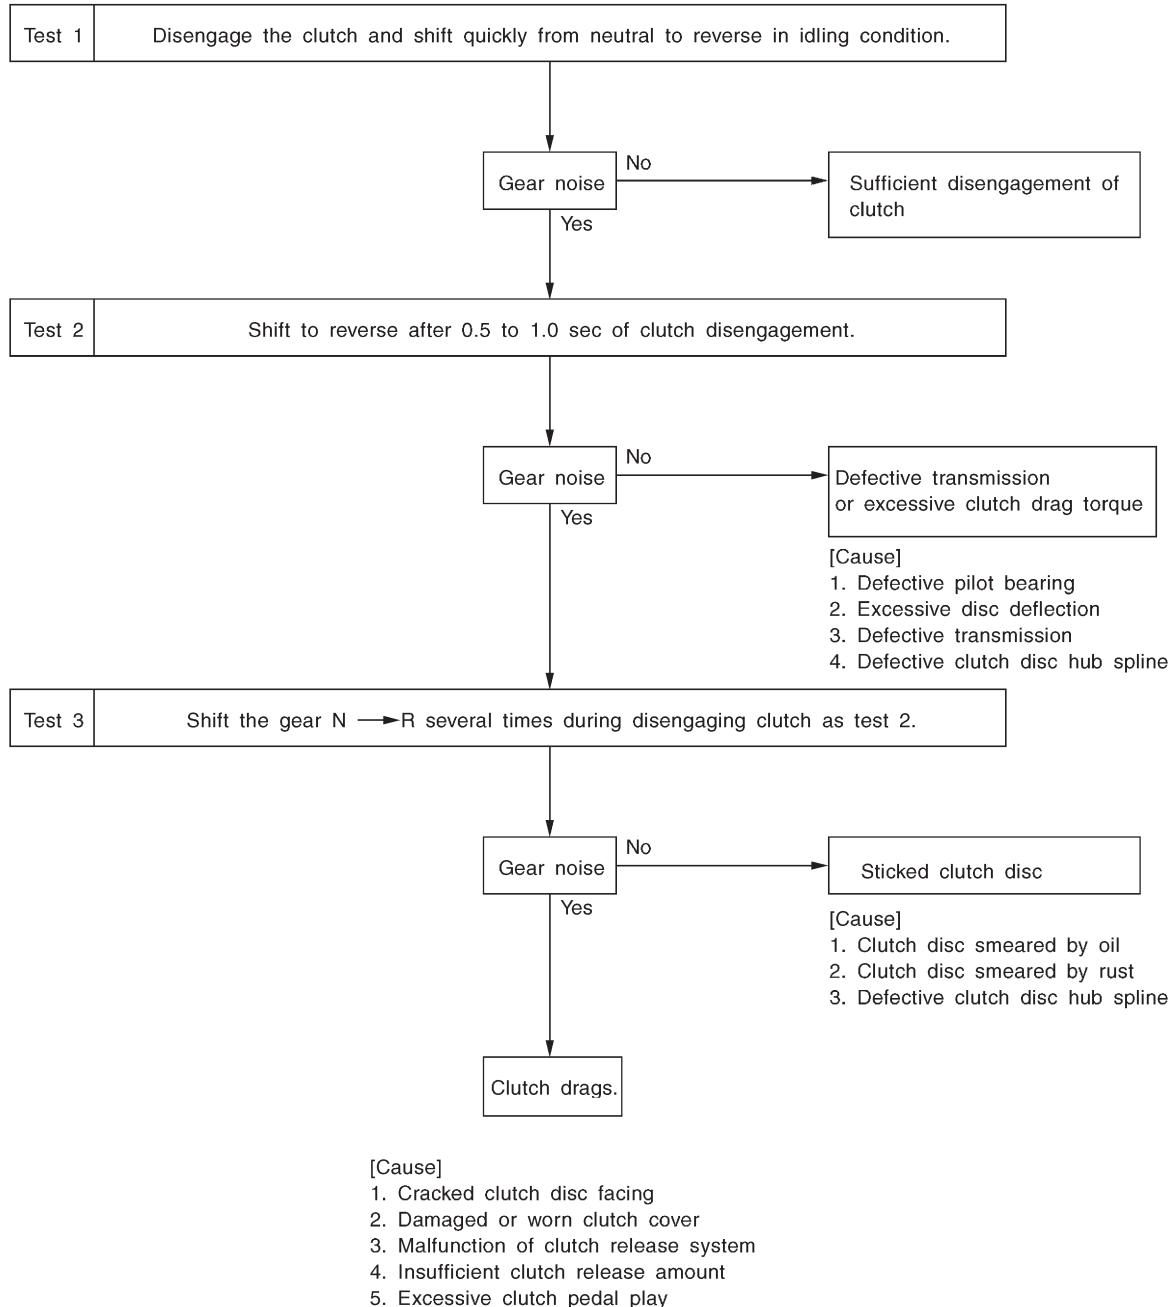

B2M1012A

GENERAL DIAGNOSTIC TABLE

Clutch System

MEMO: