

4. Driver's Airbag Module


A: CAUTION

Refer to the "CAUTION" of General Description before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>


- Airbag module, harness, connector, and mounting bracket are damaged.

B: REMOVAL

- 1) Position the front wheels straight ahead. (After moving a vehicle more than 5 m (16 ft) with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead).
- 2) Turn the ignition switch OFF.
- 3) Disconnect the ground terminal from battery, and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30, remove the two TORX® bolts on the side of steering wheel.

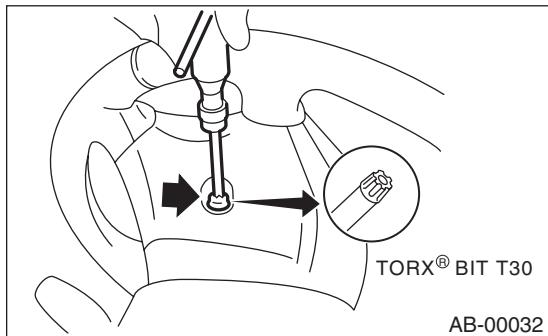

- 5) Disconnect the airbag connector on the back of airbag module, and then remove the airbag module.

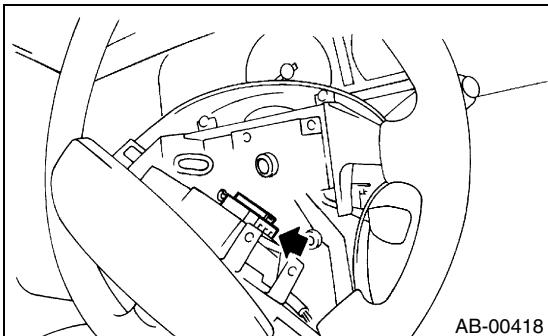

- 6) Refer to the "CAUTION" for handling of a removed airbag module. <Ref. to AB-3, CAUTION, General Description.>

C: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Do not allow harness and connectors to interfere or get tangled up with other parts.

D: INSPECTION

Check for the following, and replace the damaged parts with new parts.