


5. Passenger's Airbag Module

A: CAUTION

Refer to the "CAUTION" of General Description before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>

B: REMOVAL

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ground terminal from battery, and wait for at least 20 seconds before starting work.
- 3) Remove the glove box. <Ref. to EI-40, REMOVAL, Glove Box.>
- 4) Detach the airbag connector from the support beam bracket, and then disconnect the airbag connector.
- 5) Remove the three bolts, and then carefully remove the airbag module.

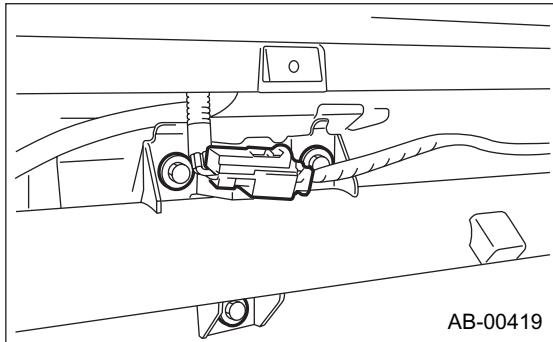

- 6) Refer to the "CAUTION" for handling of a removed airbag module. <Ref. to AB-3, CAUTION, General Description.>

C: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Do not allow harness and connectors to interfere or get tangled up with other parts.

D: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Airbag module, harness, connector, and mounting bracket are damaged.