

6. Side Airbag Module

A: CAUTION

Refer to the "CAUTION" of General Description before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>

B: REMOVAL

CAUTION:

- The side airbag module cannot be detached from the front seat assembly.
- When replacing side airbag module, replace front seat assembly.

<Ref. to SE-6, REMOVAL, Front Seat.>

C: INSTALLATION

<Ref. to SE-6, INSTALLATION, Front Seat.>

D: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front seat is deformed or damaged.
- Harness and/or connector is cracked, deformed or open.
- Lead wire is exposed.