


## 8. Side Airbag Sensor

### A: REMOVAL

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ground terminal from battery, and wait for at least 20 seconds before starting work.
- 3) Remove the outer belt (FRONT). <Ref. to SB-8, OUTER BELT (FRONT), REMOVAL, Front Seat Belt.>
- 4) Using T30 TORX® bit (Tamper resistant type), remove the two TORX® bolts.
- 5) Detach the side airbag sensor, and then disconnect the airbag connector.

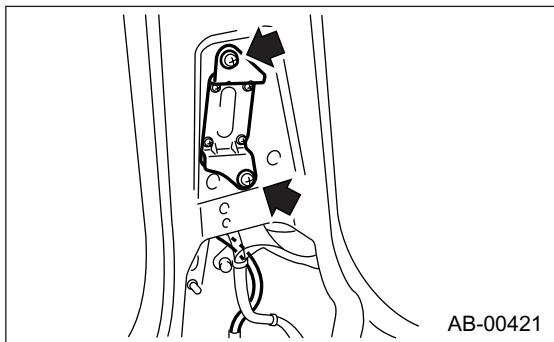

### B: INSTALLATION

#### CAUTION:

Use new TORX® bolts during re-assembly.

Install in the reverse order of removal.

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.