



9. Roll Connector

A: REMOVAL

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ground terminal from battery, and wait for at least 20 seconds before starting work.
- 3) Remove the driver's airbag module. <Ref. to AB-12, Driver's Airbag Module.>
- 4) Remove the steering wheel. <Ref. to PS-18, REMOVAL, Steering Wheel.>
- 5) Remove the steering column cover.
- 6) Remove the screws, and then remove the roll connector.

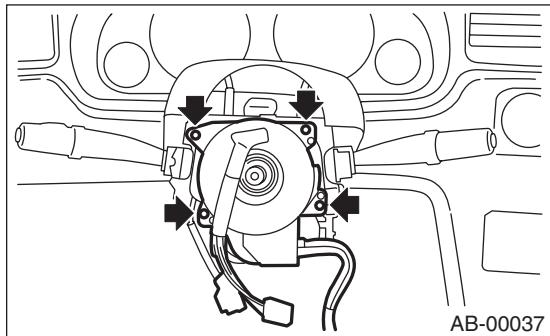

- 3) Turn the roll connector pin (A) counterclockwise approximately 2.65 turns until "▲" marks are aligned.

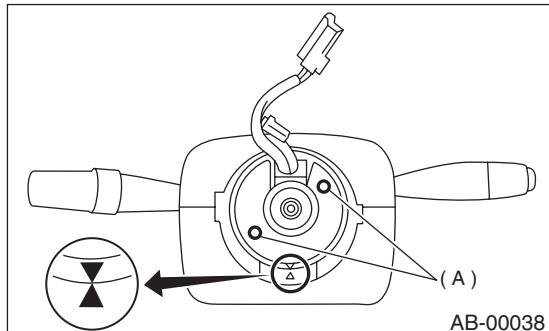

B: INSTALLATION

- 1) Install the roll connector and steering column cover in the reverse order of removal.
- 2) Before installing steering wheel, be sure the direction of roll connector is adjusted with steering. <Ref. to AB-17, ADJUSTMENT, Roll Connector.>
- 3) Install the steering wheel and airbag module.

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Combination switch and roll connector is cracked or deformed.

D: ADJUSTMENT

- 1) Check that front wheels are positioned in straight ahead direction.
- 2) Turn the roll connector pin (A) clockwise until it stops.