

BASIC DIAGNOSTIC PROCEDURE

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

Step	Check	Yes	No
1 Read Diagnostic Trouble Code. <Ref. to AB-24, Read Diagnostic Trouble Code.> Is the normal code being detected?	The normal code is detected.	Finish the diagnosis.	Go to step 2.
2 Read Diagnostic Trouble Code. <Ref. to AB-24, Read Diagnostic Trouble Code.> Are there any diagnostic trouble codes detected?	Diagnostic trouble codes are not detected.	Go to step 3.	Go to "Airbag Warning Light Failure".<Ref. to AB-27, Airbag Warning Light Failure.>
3 Perform the diagnosis. 1)Judge the possible cause from "List of Diagnostic Trouble Code" <Ref. to AB-34, List of Diagnostic Trouble Code.> . 2)Inspect using "Diagnostic Chart with Trouble Code". (DTC) 3)Repair the cause of the trouble. 4)Perform the clear memory mode. <Ref. to AB-26, Clear Memory Mode.> 5)Perform the inspection mode. <Ref. to AB-25, Inspection Mode.> 6)Read diagnostic trouble code. Are there any diagnostic trouble codes detected?	Diagnostic trouble codes are not detected.	Finish the diagnosis.	Perform the procedure 1) to 5) in step 3.