


ELECTRICAL COMPONENTS LOCATION

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Components Location

A: LOCATION

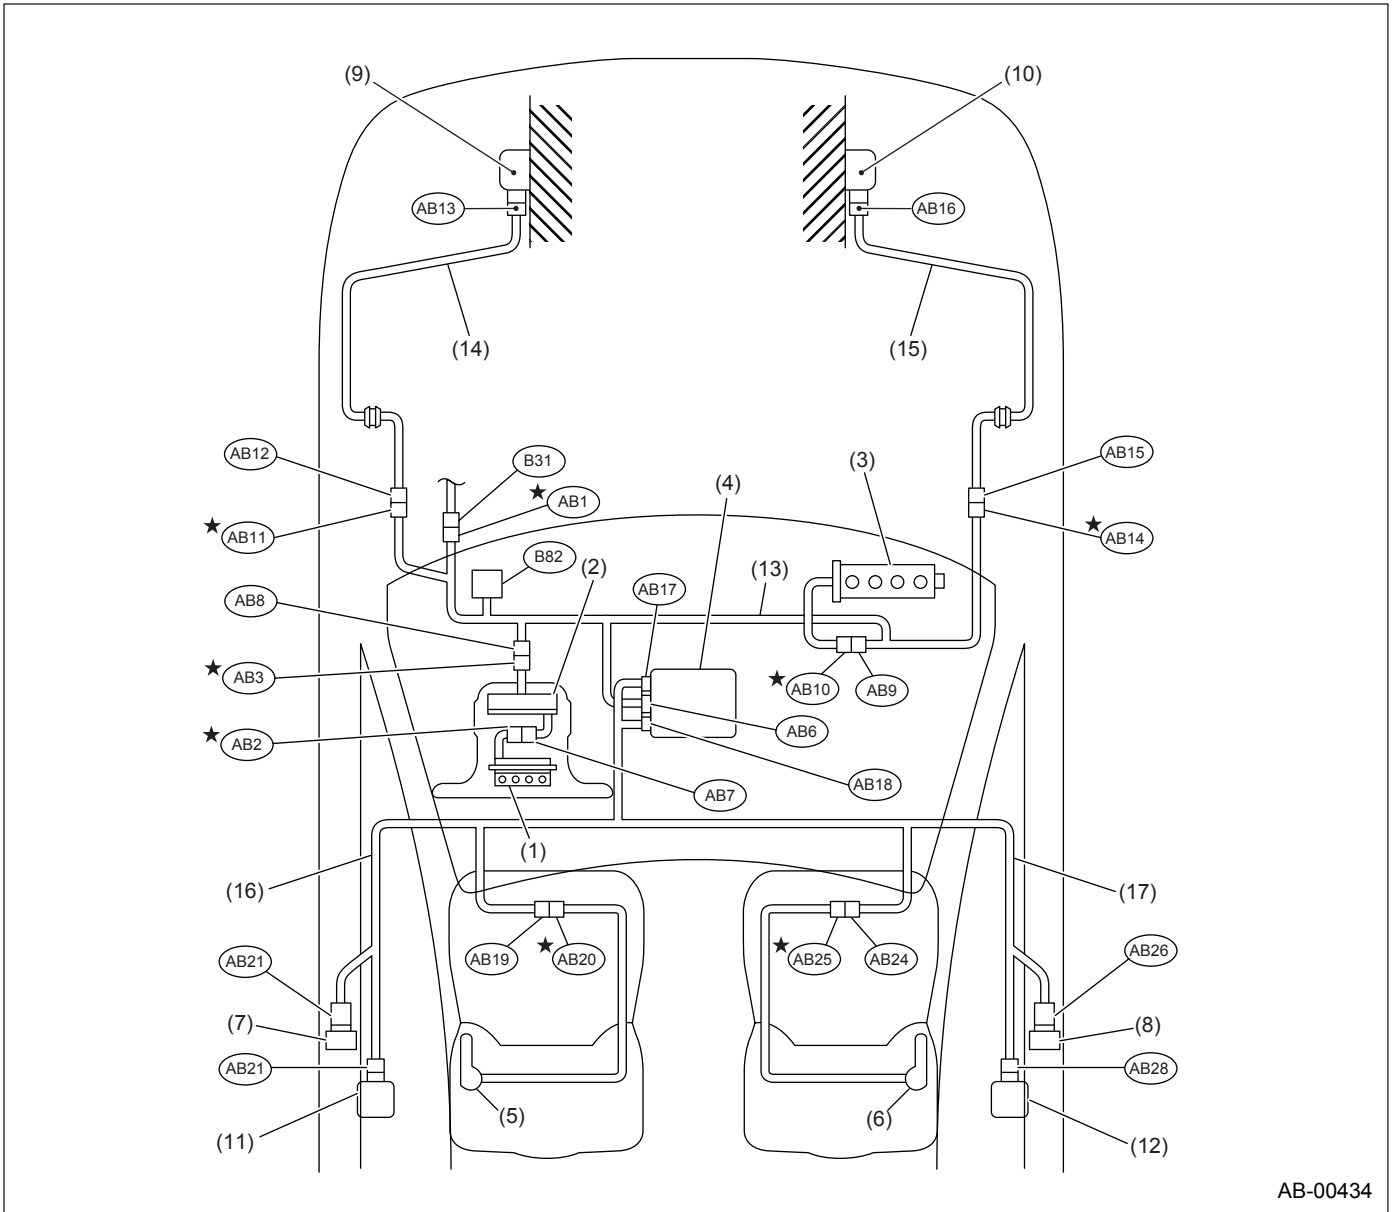

★ Male connector

Connector No.	(AB1)	(AB2)	(AB3)	(AB6)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pole	6	2	2	28	2	2	2	2	2	2	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Blue	Blue	Yellow	Blue
Connector No.	(AB15)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)
Pole	2	2	12	12	2	2	2	4	2	2	2	4
Color	Blue	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow

ELECTRICAL COMPONENTS LOCATION

AIRBAG SYSTEM (DIAGNOSTICS)

- | | | |
|-------------------------------|---------------------------------|------------------------------------|
| (1) Driver's airbag module | (7) Seat belt pretensioner (LH) | (13) Airbag main harness |
| (2) Roll connector | (8) Seat belt pretensioner (RH) | (14) Front sub-sensor harness (LH) |
| (3) Passenger's airbag module | (9) Front sub-sensor (LH) | (15) Front sub-sensor harness (RH) |
| (4) Airbag control module | (10) Front sub-sensor (RH) | (16) Side airbag harness (LH) |
| (5) Side airbag module (LH) | (11) Side airbag sensor (LH) | (17) Side airbag harness (RH) |
| (6) Side airbag module (RH) | (12) Side airbag sensor (RH) | |