


6. Airbag Connector

A: OPERATION

1. POWER SUPPLY

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of the arrow.
- (2) Pull the female connector in the direction of the arrow with slide lock (A) moved.

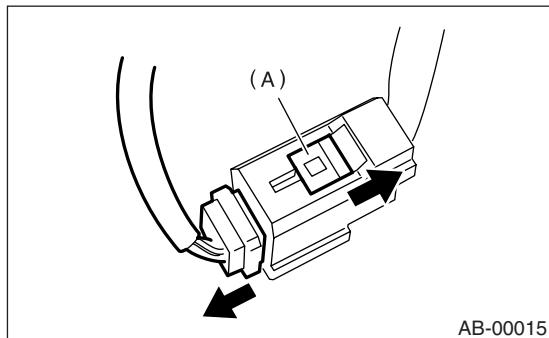


AB-00015

CAUTION:

When pulling, be sure to hold onto the connector and not the wire.

2) How to connect:

Holding the connector (A), and push it in carefully until a connecting sound is heard.

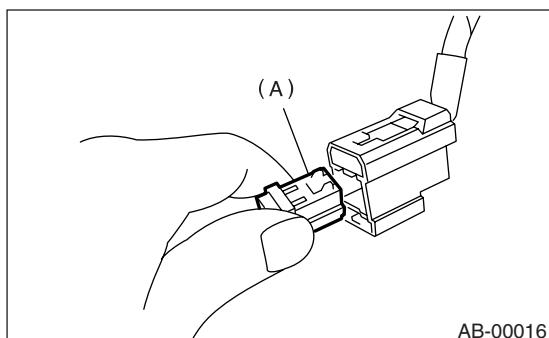

AB-00016


CAUTION:

Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

2. DRIVER'S AIRBAG, PASSENGER'S AIRBAG, AND SIDE AIRBAG

1) How to disconnect:

- (1) Push the lock arm (A).
- (2) With lock arm (A) pushed in, move the slide lock (B) in the direction of the arrow.

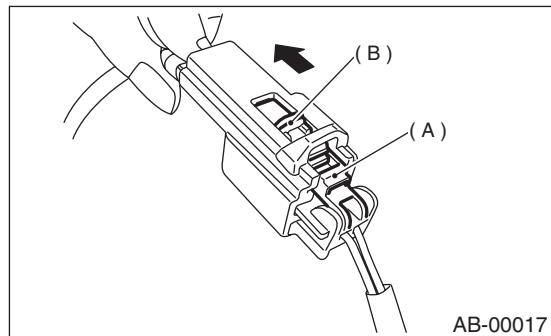


AB-00017

- (3) With slide lock (B) pulled, remove the lock arm (A) to its original position, and then pull in the direction of the arrow and separate the connector.

CAUTION:

When pulling, be sure to hold onto the connector and not the wire.

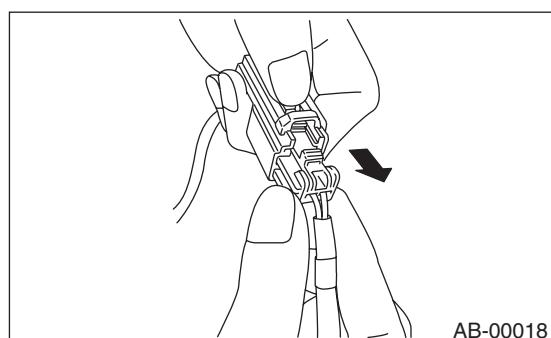


AB-00018

2) How to connect:

Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:

Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

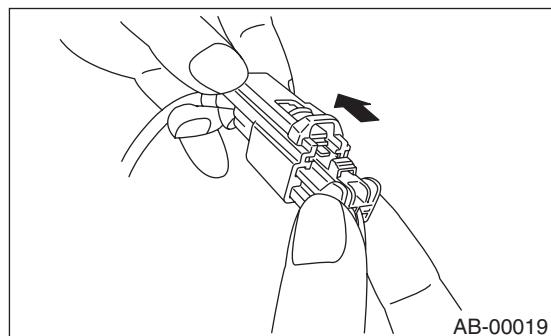

AB-00019

AIRBAG CONNECTOR

AIRBAG SYSTEM (DIAGNOSTICS)


3. FRONT SUB-SENSOR, SIDE AIRBAG SENSOR

1) How to disconnect:

- (1) Holding the outer part (A), pull it in the direction of the arrow.

CAUTION:

When pulling, be sure to hold onto the connector and not the wire.

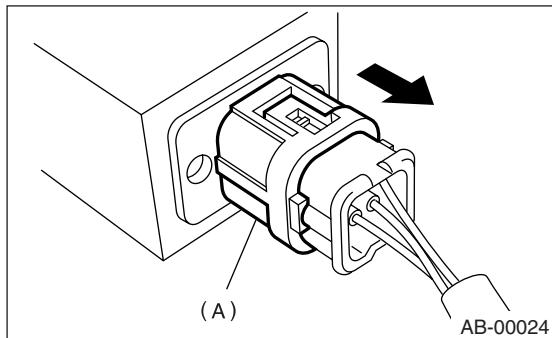


2) How to connect:

Holding the connector, and push it in carefully until a connecting sound is heard.

CAUTION:


- Outer (A) moves back, and so do not put your hand on the outer part.
- Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.

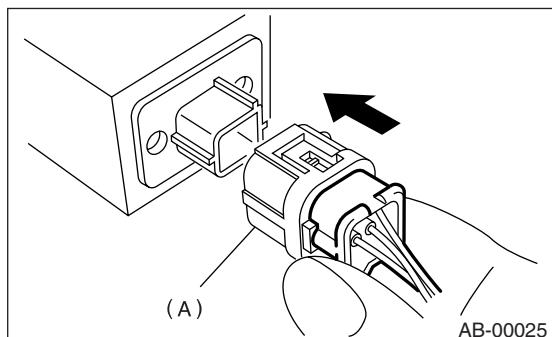

4. PRETENSIONER

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of the arrow.
- (2) Pull the connector (B) in the direction of the arrow with slide lock (A) moved.

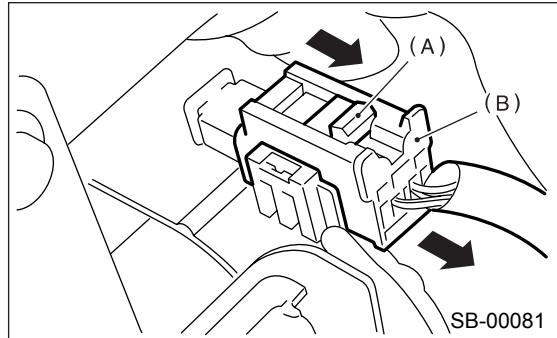


CAUTION:

When pulling, be sure to hold onto the connector and not the wire.

2) How to connect:

Holding the connector (A), and push it in carefully until a connecting sound is heard.

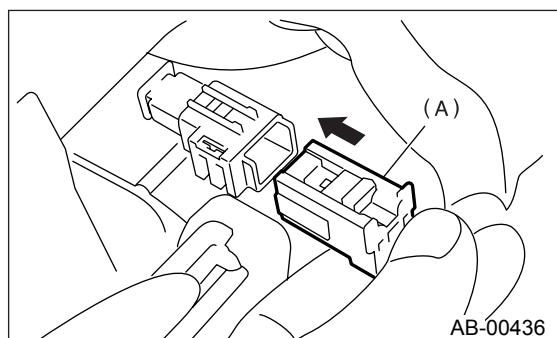

CAUTION:

Be sure to insert the connector in until it locks. Then pull on it gently to make sure that it is locked.