


READ DIAGNOSTIC TROUBLE CODE

AIRBAG SYSTEM (DIAGNOSTICS)

8. Read Diagnostic Trouble Code

A: OPERATION

- 1) Turn the ignition switch ON.
- 2) Connect the diagnosis terminal (1) to the diagnosis connector (2) terminal No. 1 in the driver's seat lower cover area.

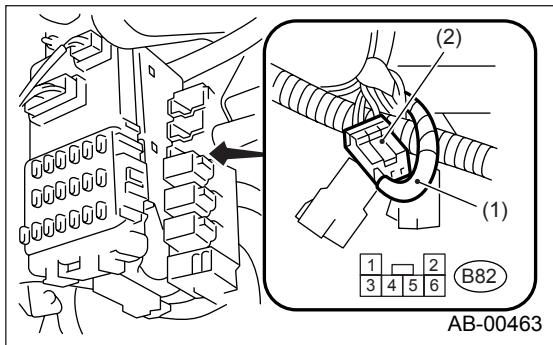


- 3) Read trouble code by identifying the way the air bag warning light flashes.

The airbag warning light flashes a code corresponding to the faulty parts.

The long segment (1.2 sec on) indicates a "ten", and the short segment (0.3 sec on) indicates a "one".

NOTE:

- "List of Diagnostic Trouble Code" <Ref. to AB-34, List of Diagnostic Trouble Code.>
- "Airbag Warning Light Failure" <Ref. to AB-27, Airbag Warning Light Failure.>

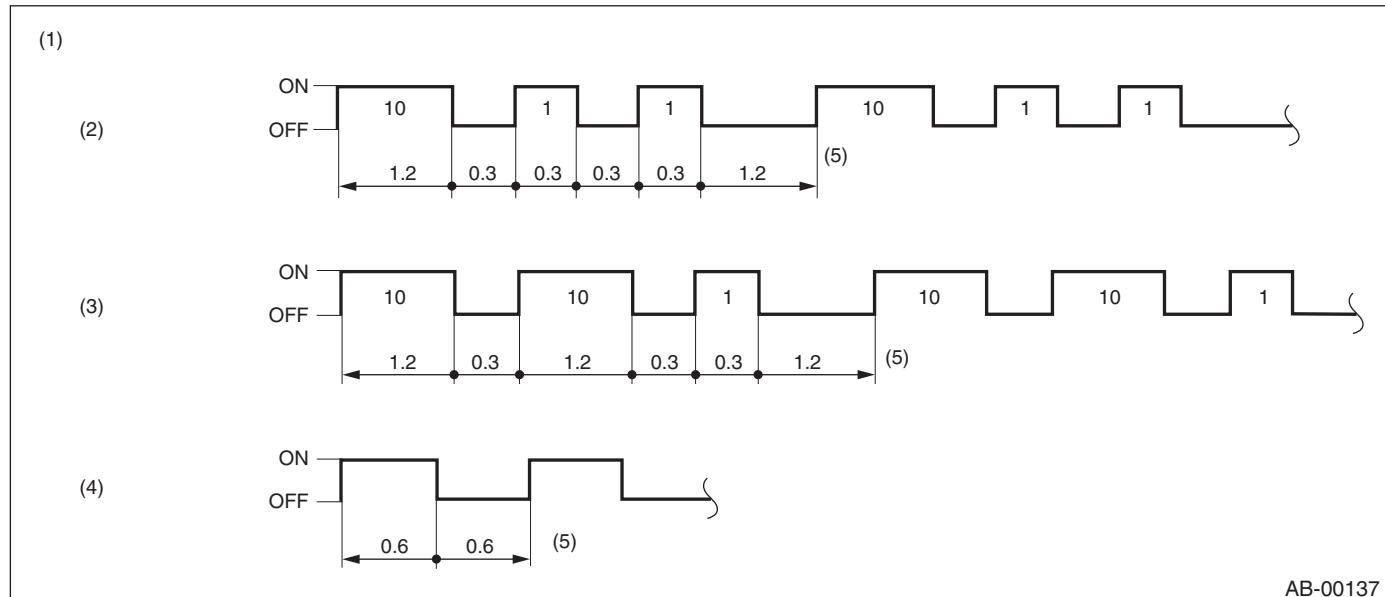

(1) Example

(4) Flashing normal code:

(2) Flashing code 12:

(5) Seconds

(3) Flashing code 21:

4) Turn the ignition switch OFF, and disconnect the diagnosis terminal from the diagnosis connector terminal No 1.

5) Wind the tape around the diagnosis terminal and return it to its original position.