


3. Cruise Control Module

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the side sill front cover.

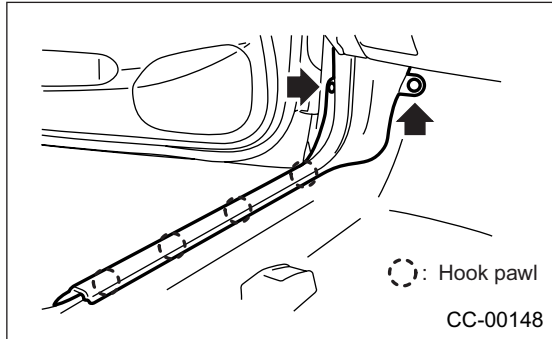

- 3) Disconnect the connector from the cruise control module.
- 4) Remove the cruise control module (A).



B: INSTALLATION

Install is in the reverse order of removal.