

6. Stop and Brake Switch

A: REMOVAL


- 1) Disconnect the ground terminal from battery.
- 2) Disconnect the connector from the switch, and then remove the switch. <Ref. to BR-53, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the brake switch (1) and stop light switch (2) resistance.

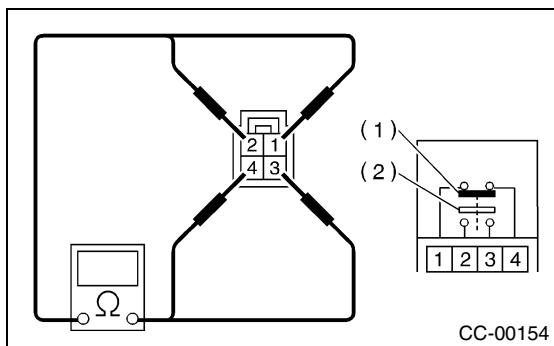

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1Ω
	Depressed	1 and 4	More than 1MΩ
Stop light	Released	2 and 3	More than 1MΩ
	Depressed	2 and 3	Less than 1Ω

If NG, replace the stop and brake switch.