

8. Inhibitor Switch

A: REMOVAL


- 1) Disconnect the ground terminal from the battery.
- 2) Disconnect the connector from the switch, and then remove the switch. <Ref. to AT-49, REMOVAL, Inhibitor Switch.>

B: INSTALLATION

Installation is in the reverse order of removal.

C: INSPECTION

Measure the inhibitor switch resistance.

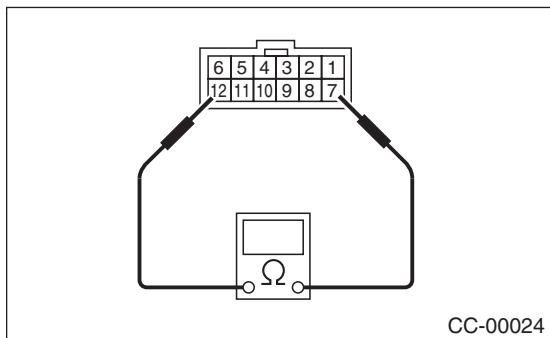

Selector lever position	Terminal No.	Standard
P		Less than 1Ω
N		Less than 1Ω
Except P and N	7 and 12	More than 1MΩ

If NG, replace the inhibitor switch.