


7. Rear Speaker

A: REMOVAL

- 1) Disconnect the battery ground cable.
- 2) Remove the rear door trim. <Ref. to EI-39, RE-MOVAL, Rear Door Trim.>
- 3) Remove the rear speaker mounting screws.

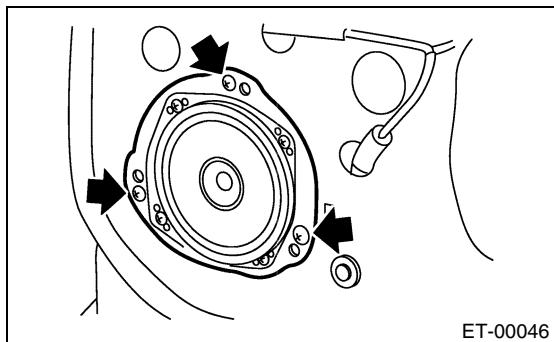

- 4) Disconnect the harness connector and remove the rear speaker.

B: INSTALLATION

Install in the reverse order of removal.