


GENERAL DESCRIPTION

EXTERIOR BODY PANELS

1. General Description

A: SPECIFICATIONS

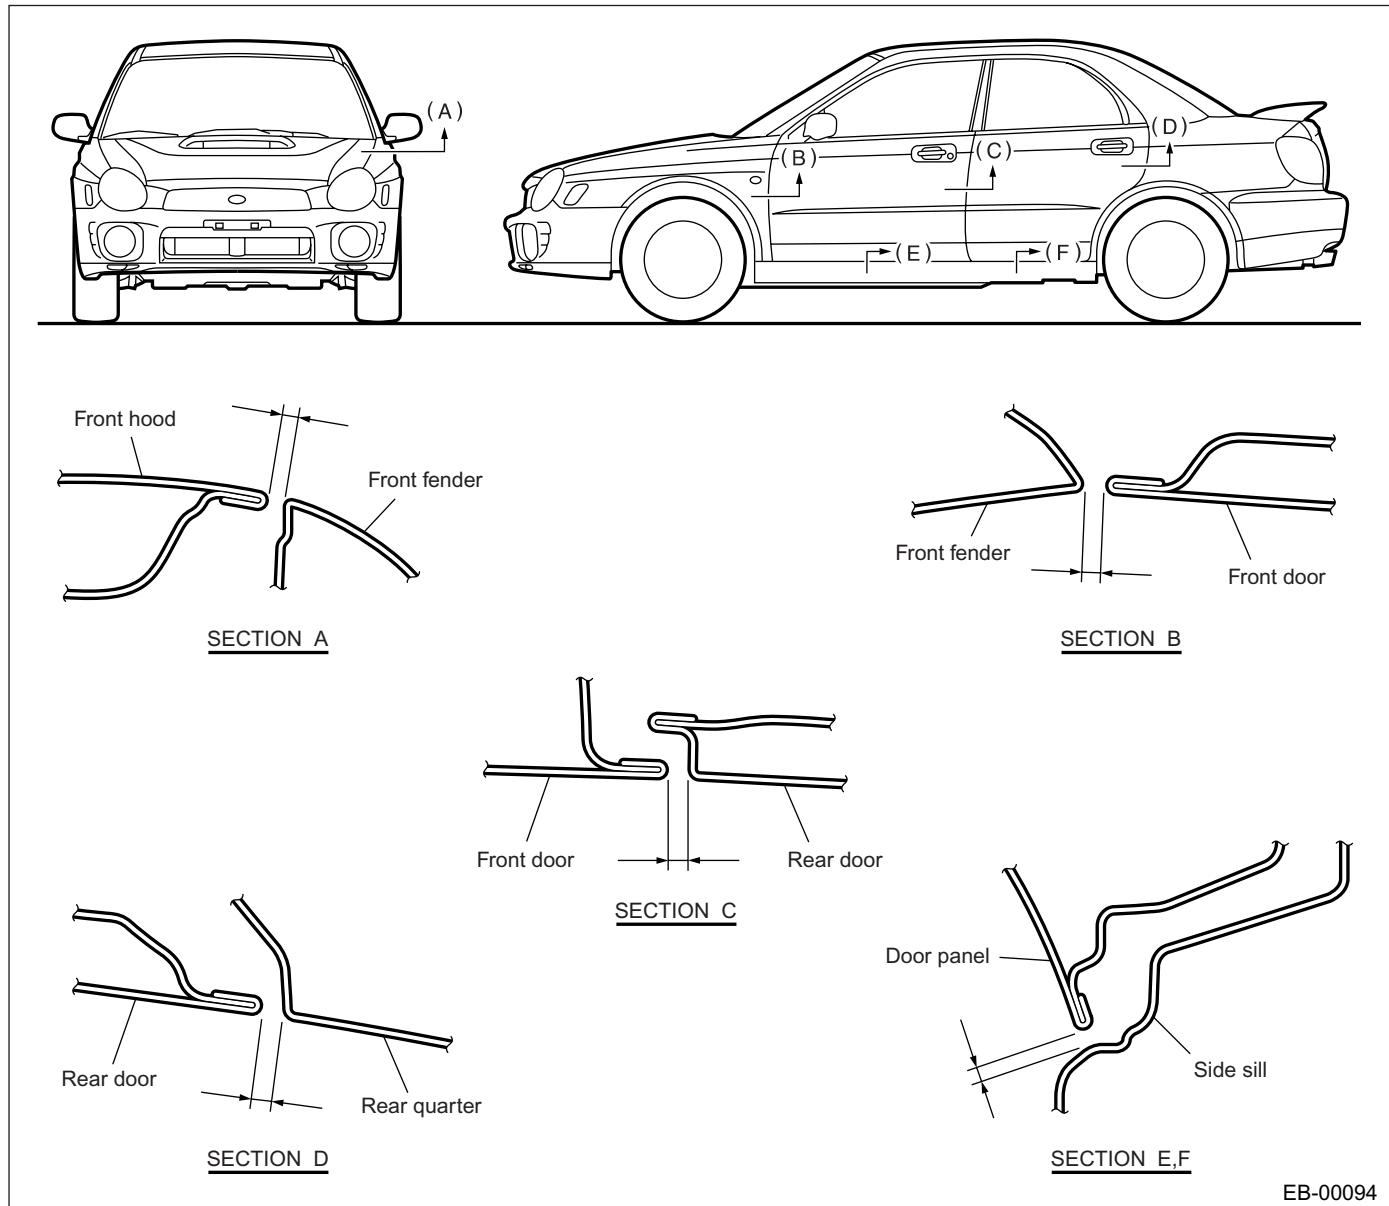


EB-00094

Section	Part	Specification
A	Front hood to Front fender	NA: $4.0 \text{ mm} \pm 1.0$ ($0.16 \pm 0.04 \text{ in}$) TURBO: $3.7 \text{ mm} \pm 1.0$ ($0.15 \pm 0.04 \text{ in}$)
B	Front fender to Front door	$4.6 \text{ mm} \pm 1.0$ ($0.18 \pm 0.04 \text{ in}$)
C	Front door to Rear door	5.0 mm (0.20 in)
D	Rear door to Rear quarter	4.6 mm (0.18 in)
E, F	Door panel to Side sill	5.9 mm (0.23 in)

B: COMPONENT

1. FRONT HOOD

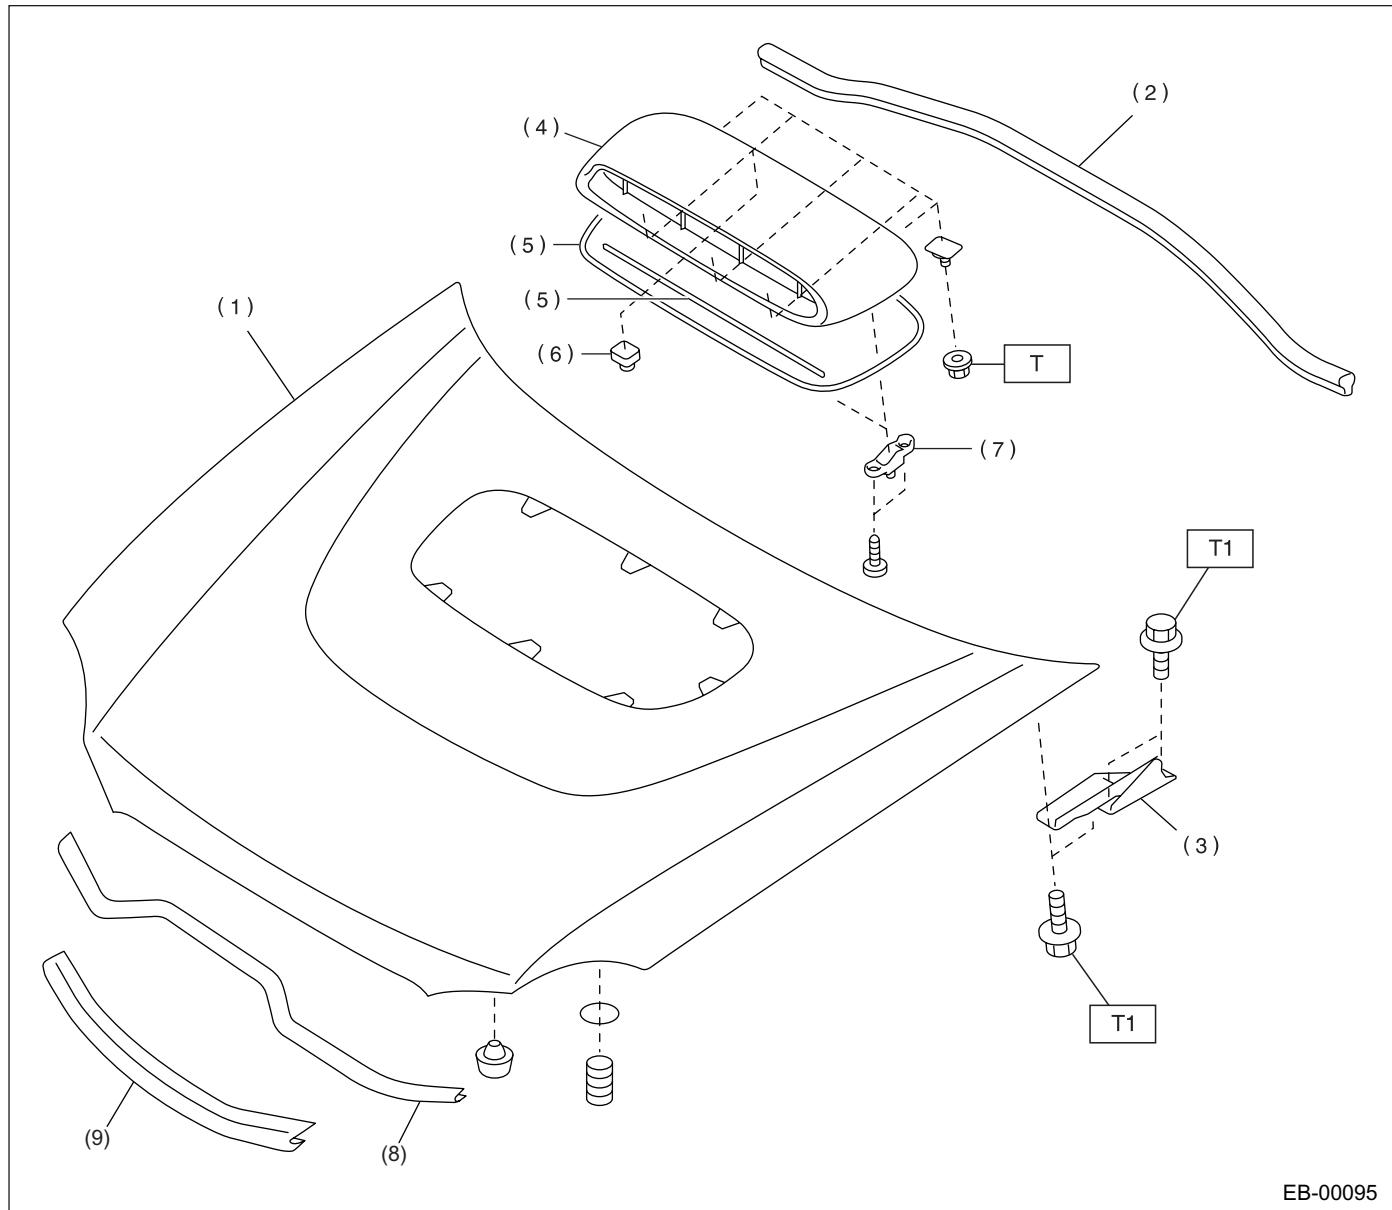

EB-00095


(1) Front hood	(6) Clip
(2) Seal (Front panel)	(7) Locking piece
(3) Hinge	(8) Seal (Intake duct)
(4) Hood grille	(Only turbo model)
(5) Packing	(9) Seal (Hood)

Tightening torque: N·m (kgf·m, ft·lb)***T: 4.4 (0.45, 3.25)******T1: 24.5 (2.5, 18.1)***

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

2. FRONT FENDER PANEL

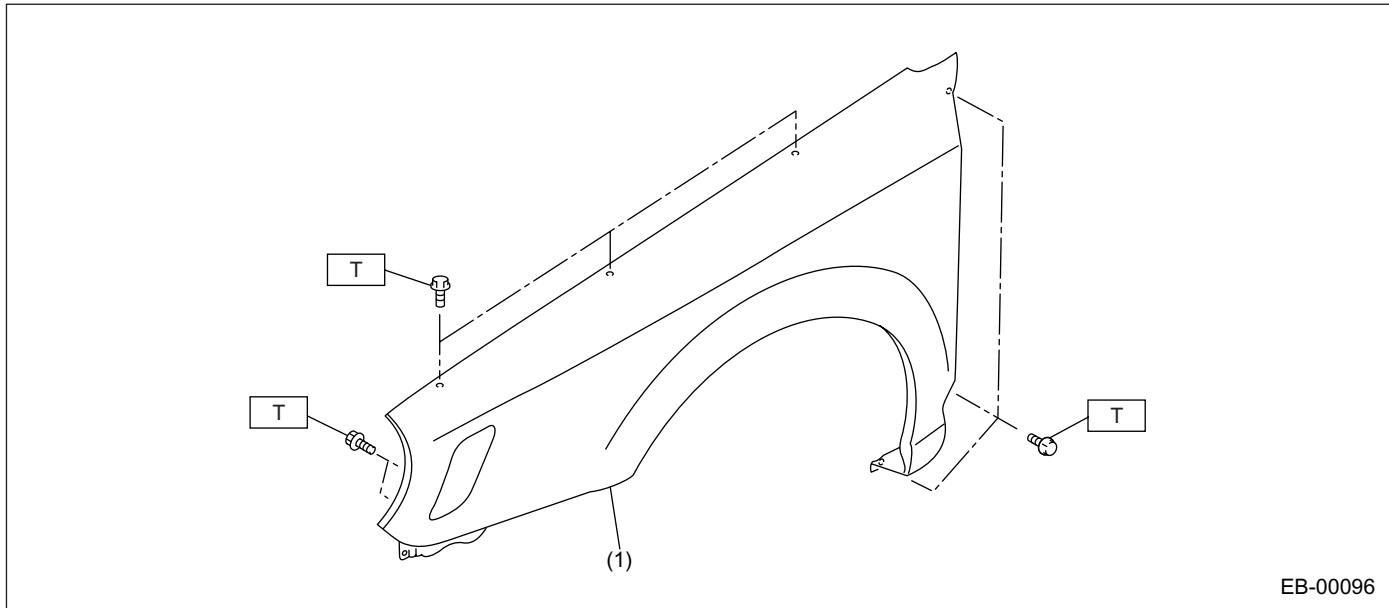

EB-00096


(1) Front fender panel

Tightening torque: N·m (kgf·m, ft-lb)
T: 7.35 (0.75, 5.4)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

3. FRONT DOOR PANEL

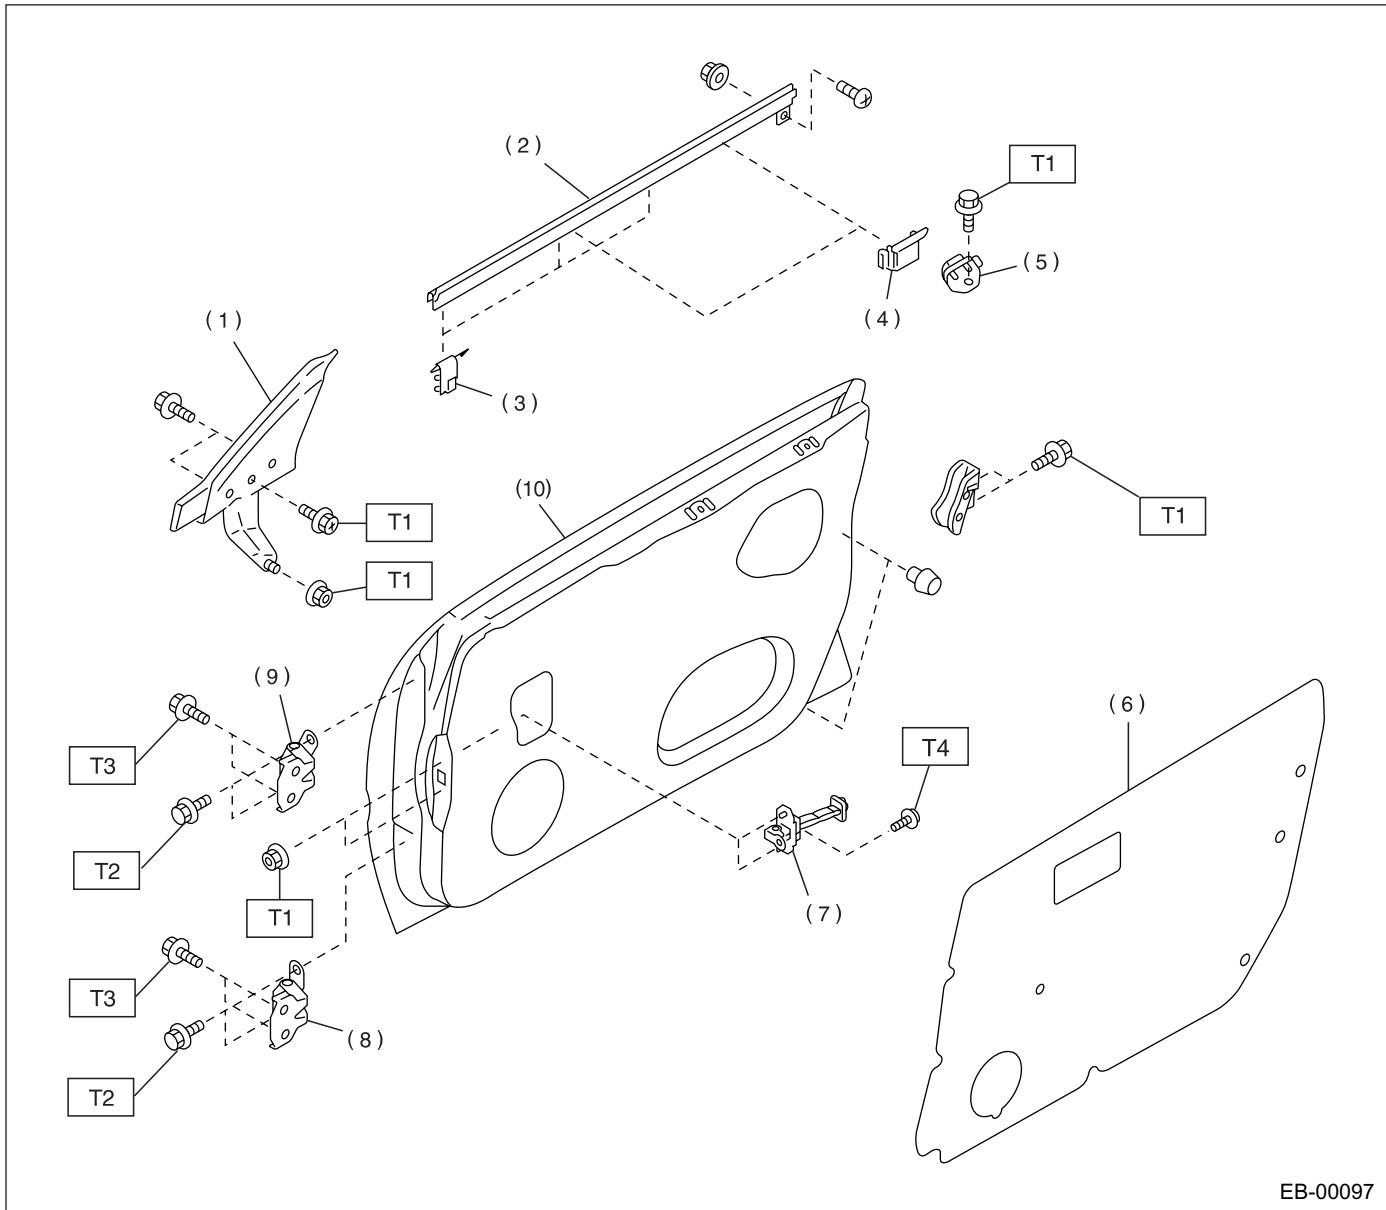

(1) Gusset	(6) Sealing cover
(2) Weatherstrip (Outer)	(7) Checker
(3) Clip (Weatherstrip, outer)	(8) Lower hinge
(4) Stabilizer (Outer)	(9) Upper hinge
(5) Stabilizer (Inner)	(10) Door panel


Tightening torque: N·m (kgf·m, ft-lb)

T1: 7.4 (0.75, 5.5)
T2: 24.5 (2.5, 18.1)
T3: 29.4 (3.0, 21.7)
T4: 32.3 (3.3, 23.8)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

4. REAR DOOR PANEL

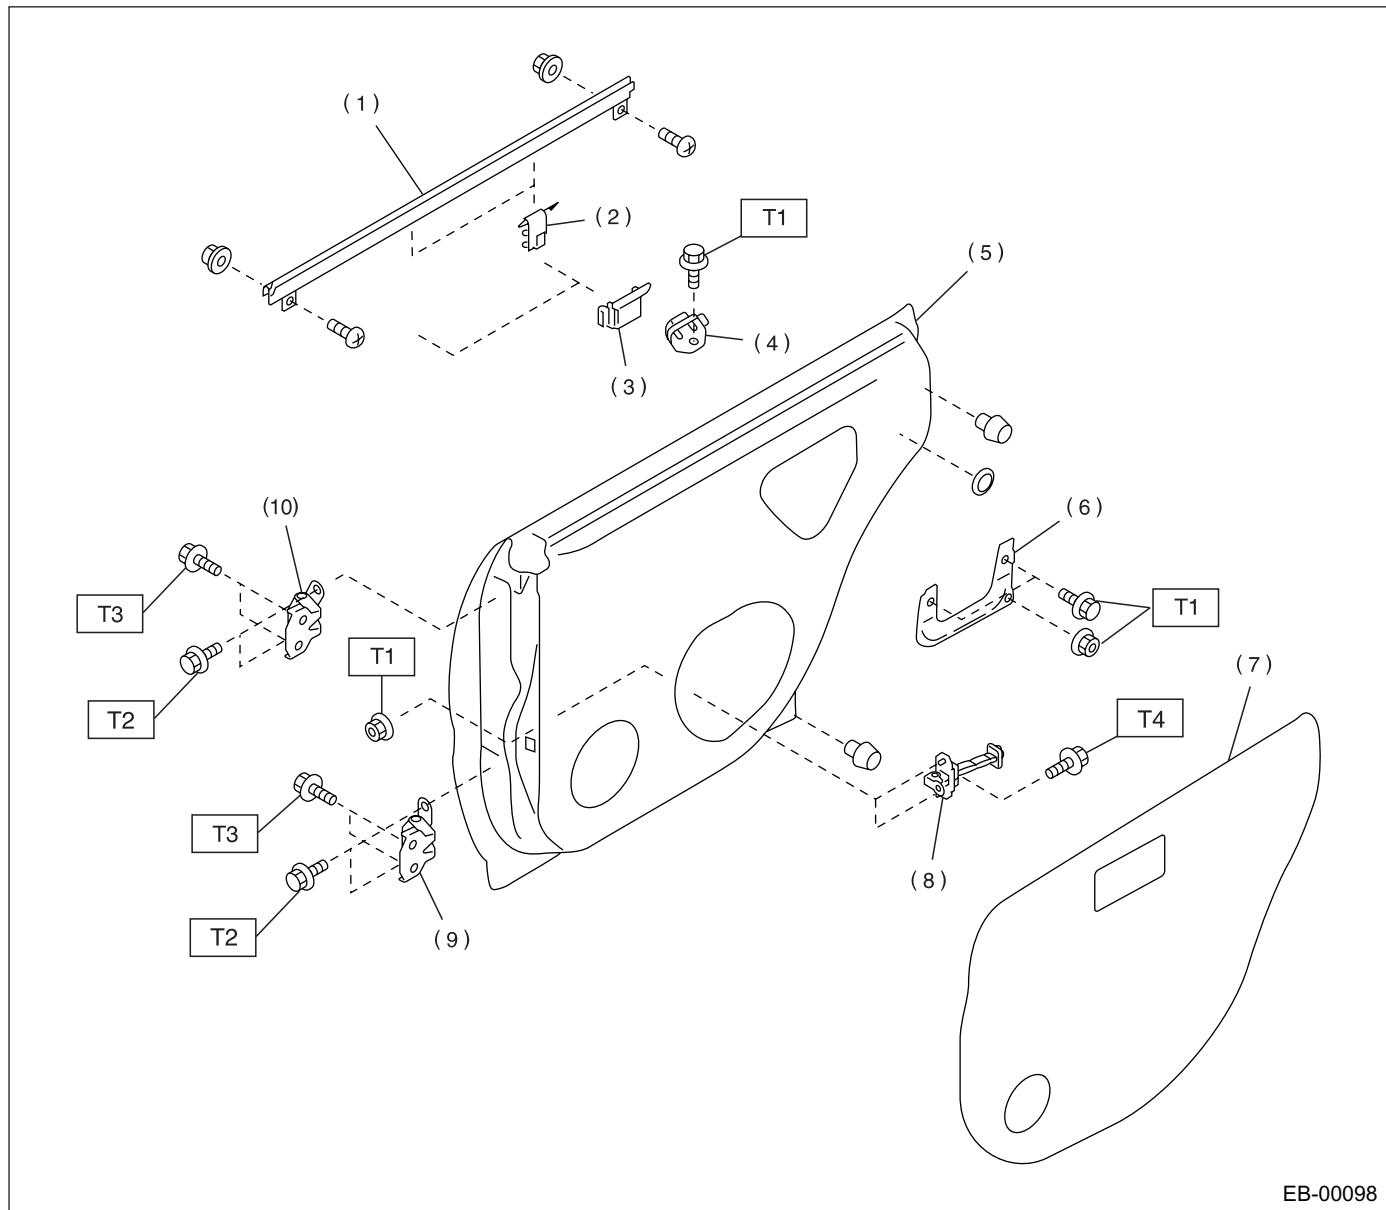


(1)	Weatherstrip (Outer)
(2)	Clip (Weatherstrip, outer)
(3)	Stabilizer (Outer)
(4)	Stabilizer (Inner)
(5)	Door panel
(6)	Bracket
(7)	Sealing cover
(8)	Checker
(9)	Lower hinge
(10)	Upper hinge

Tightening torque: N·m (kgf·m, ft·lb)

T1:	7.4 (0.75, 5.5)
T2:	24.5 (2.5, 18.1)
T3:	29.4 (3.0, 21.7)
T4:	32.3 (3.3, 23.8)

5. TRUNK LID PANEL

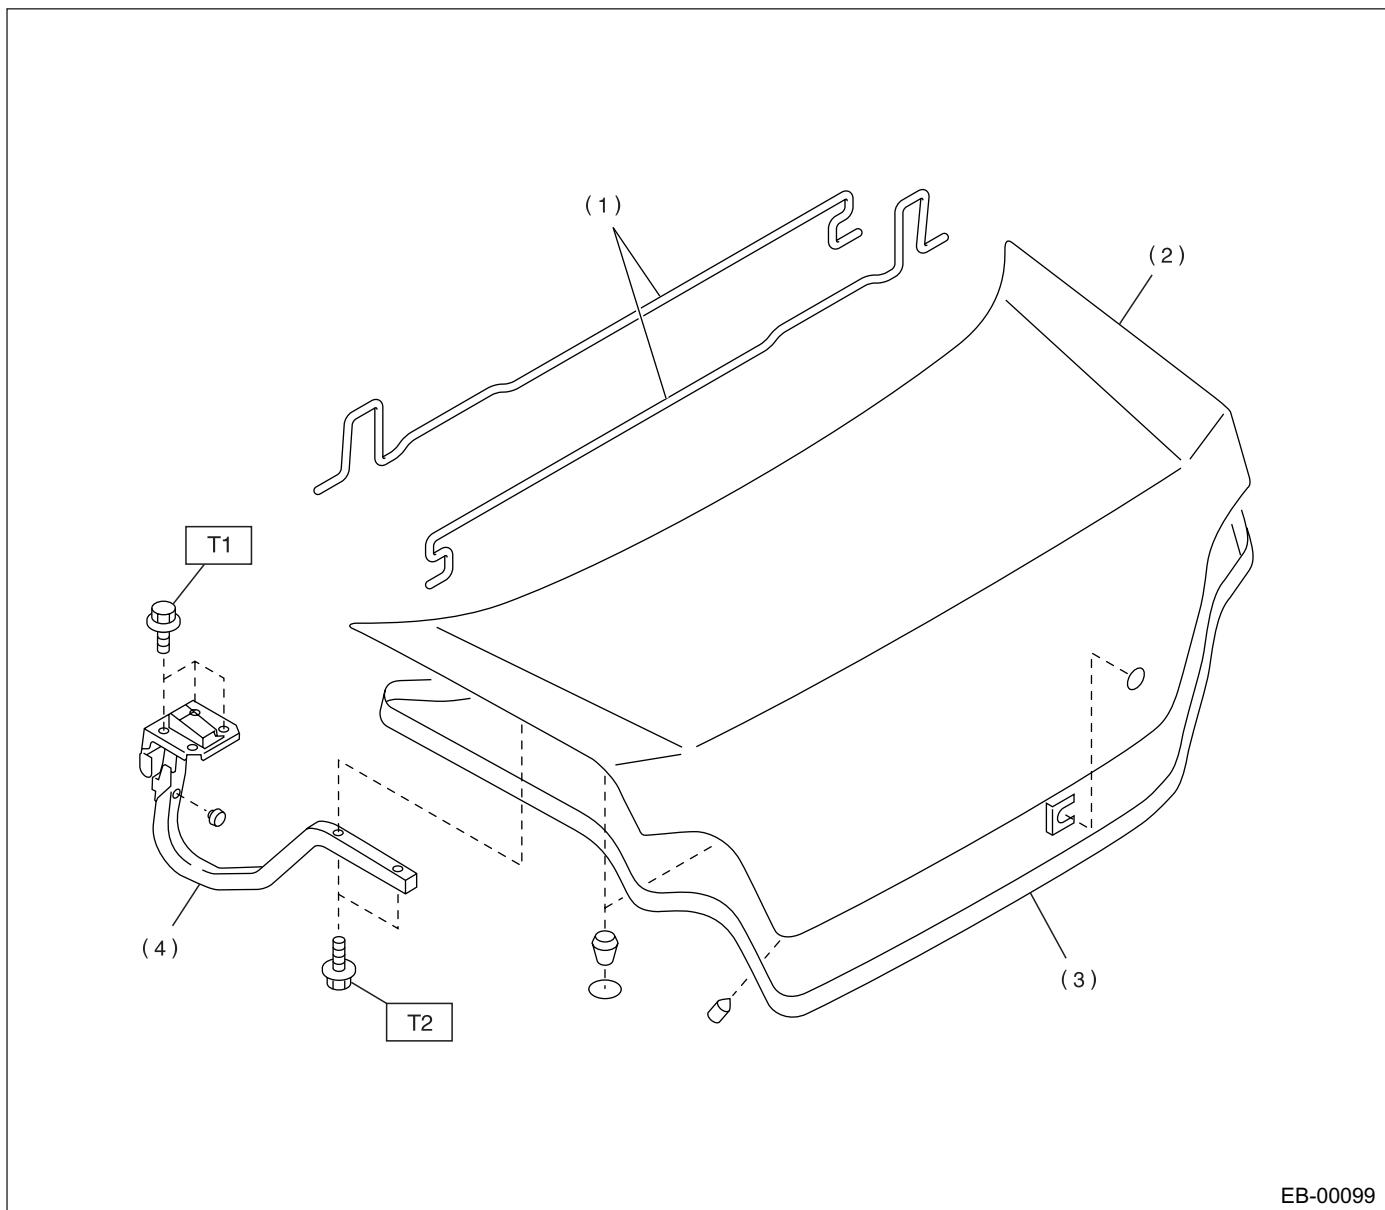

EB-00099

- (1) Torsion bar
- (2) Trunk lid
- (3) Weatherstrip


- (4) Hinge ASSY

Tightening torque: N·m (kgf·m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 17.6 (1.8, 13)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

6. REAR GATE PANEL

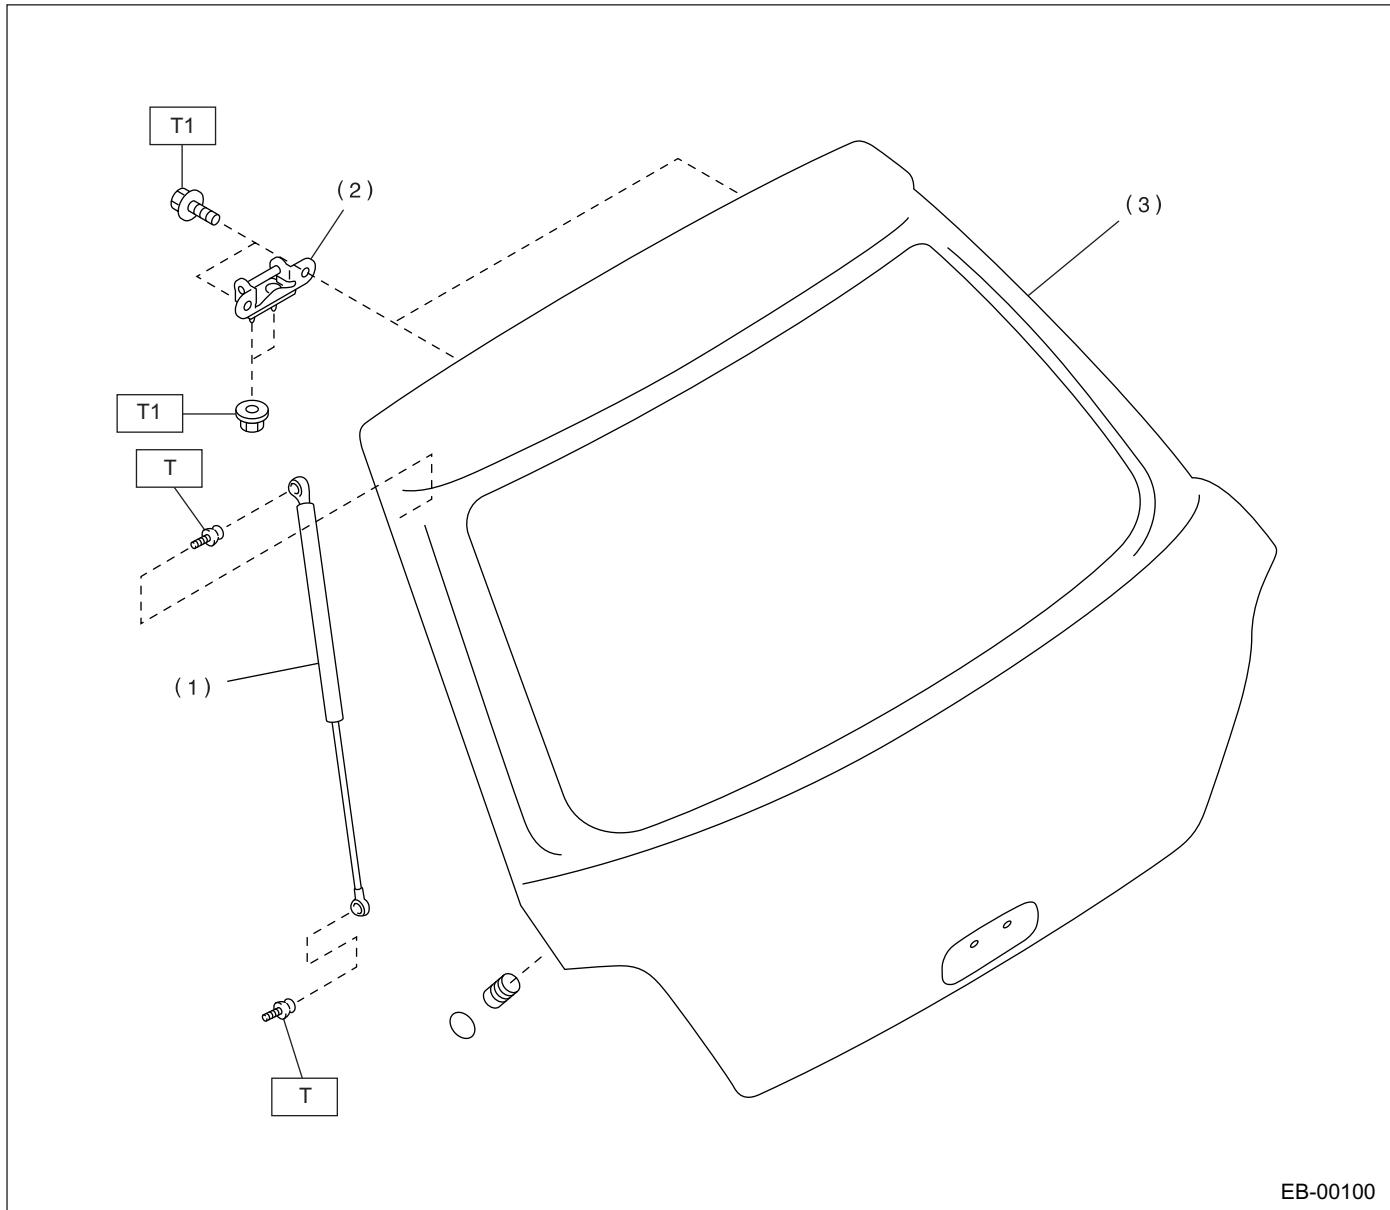

EB-00100

- (1) Gas stay
- (2) Hinge
- (3) Rear gate

Tightening torque: N·m (kgf·m, ft-lb)
T: 13.7 (1.4, 10.1)
T1: 25 (2.5, 18.1)

C: CAUTION



- Exterior body panels are heavy. Do not drop and damage the panels. During removal and installation, do not damage the panel painting surface.
- While removing mounting bolts, using assistance devices such as a support jack will help support the panel.
- Be careful not to lose small parts.

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

D: PREPARATION TOOL

1. SPECIAL TOOLS

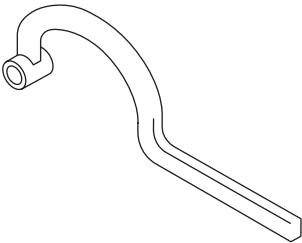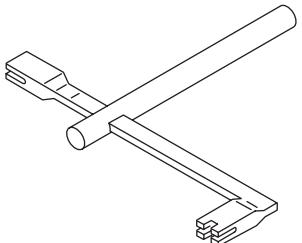ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925610000	925610000	WRENCH	Used for removing and installing door hinge.
 ST-927780000	927780000	REMOVER	Used for removing and installing trunk torsion bar.

2. GENERAL TOOL

TOOL NAME	REMARKS
Support Jack	Used for supporting door panel.