



2. Front Hood

A: REMOVAL


- 1) Open the front hood to remove the washer nozzles.
- 2) Release the clips to remove the hood insulator.

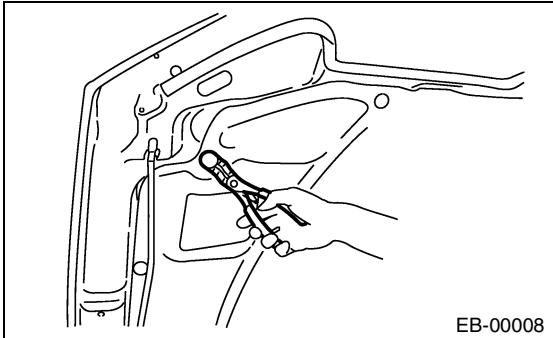

- 2) Adjust the height at front end of hood. <Ref. to SL-45, ADJUSTMENT, Front Hood Lock Assembly.>
- 3) Rotate the hood buffer to adjust lateral height.

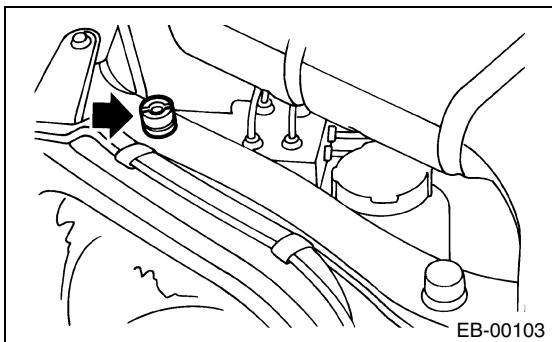

- 3) Remove the bolts to disconnect the hood from hinges.

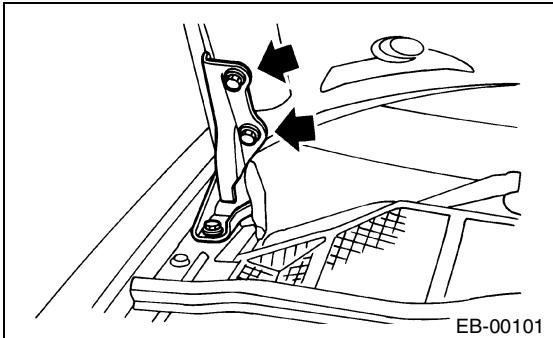

- 4) Remove the hood grille. (Turbo model) <Ref. to EI-20, REMOVAL, Hood Grille.>

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the clearance between hood and fender. Clearance must be equal at both sides.

Tightening torque:

24.5 N·m (2.49 kgf·m, 18 ft-lb)

C: ADJUSTMENT

- 1) Use the hinge mounting holes to align the front hood longitudinally and laterally.

