


3. Fender Panel

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the side sill spoilers. <Ref. to EI-37, Side Sill Spoiler. (If fitted)>
- 3) Remove the front bumper face. <Ref. to EI-24, REMOVAL, Front Bumper.>
- 4) Remove the mud guard. <Ref. to EI-33, REMOVAL, Mud Guard.>
- 5) Loosen the bolts to remove front fender.

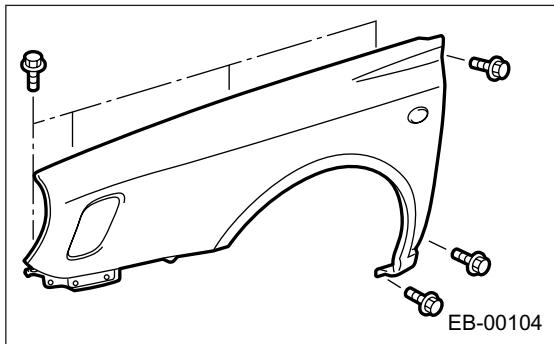

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When the fender panel is installed, the clearance between fender panel and hood or front fender must be equal.

Tightening torque:

7.35 N·m (0.75 kgf-m, 5.4 ft-lb)