

7. Rear Sealing Cover

A: REMOVAL

- 1) Disconnect the battery ground cable.
- 2) Remove the rear door trim. <Ref. to EI-39, RE-MOVAL, Rear Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-9, RE-MOVAL, Rear Speaker.>
- 4) Remove the sealing cover in a way that the butyl tape remains on the sealing cover side.

CAUTION:

- Carefully remove the sealing cover. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new one.



B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing sealing cover, use butyl tape as sealer.
- 3) Press the sealer-applied area firmly to prevent any floating on surface.

Butyl tape:

3M 8626 or equivalent

CAUTION:

- Apply butyl tape uniformly.
- Attach sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If the sealing cover gets damaged, replace it with a new one.