


10. Rear Spoiler

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Open the trunk lid.
- 3) Disconnect the connector from high mount stop light.

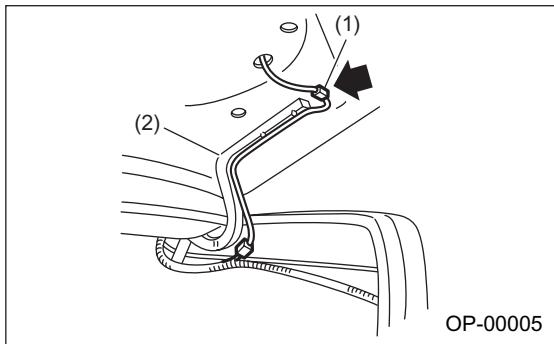

(1) Connector

(2) Trunk hinge

- 4) Remove the retention cable together with the trunk hinge lower side bolt.
- 5) Remove rear spoiler mounting nuts.

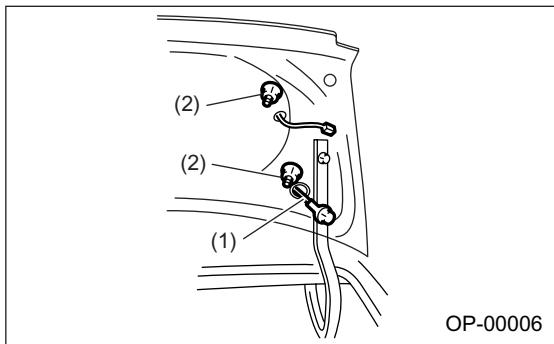

(1) Retention cable

(2) Mounting nut

- 6) Remove the rear spoiler together with retention cable.

CAUTION:

Be careful to avoid damage during removal and installation.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Rear spoiler to trunk lid

$7.5 \text{ N}\cdot\text{m} (0.76 \text{ kgf}\cdot\text{m}, 5.5 \text{ ft-lb})$

Retention cable to trunk hinge

$13.7 \text{ N}\cdot\text{m} (1.4 \text{ kgf}\cdot\text{m}, 10.1 \text{ ft-lb})$