


14. Glove Box

A: REMOVAL

- 1) Open the glove box.
- 2) Loosen the screws to remove glove box.

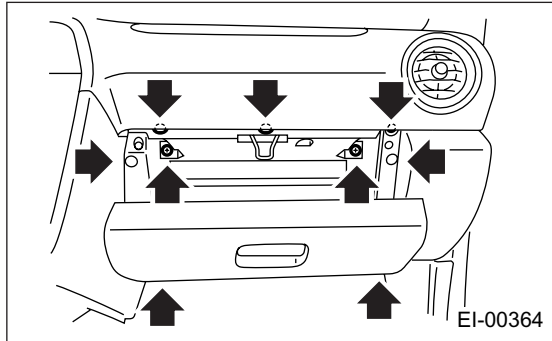

B: INSTALLATION

Install in the reverse order of removal.