


15. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-51, REMOVAL, Roof Trim.>
- 2) Remove the four mounting nuts and then detach the roof rail carefully.

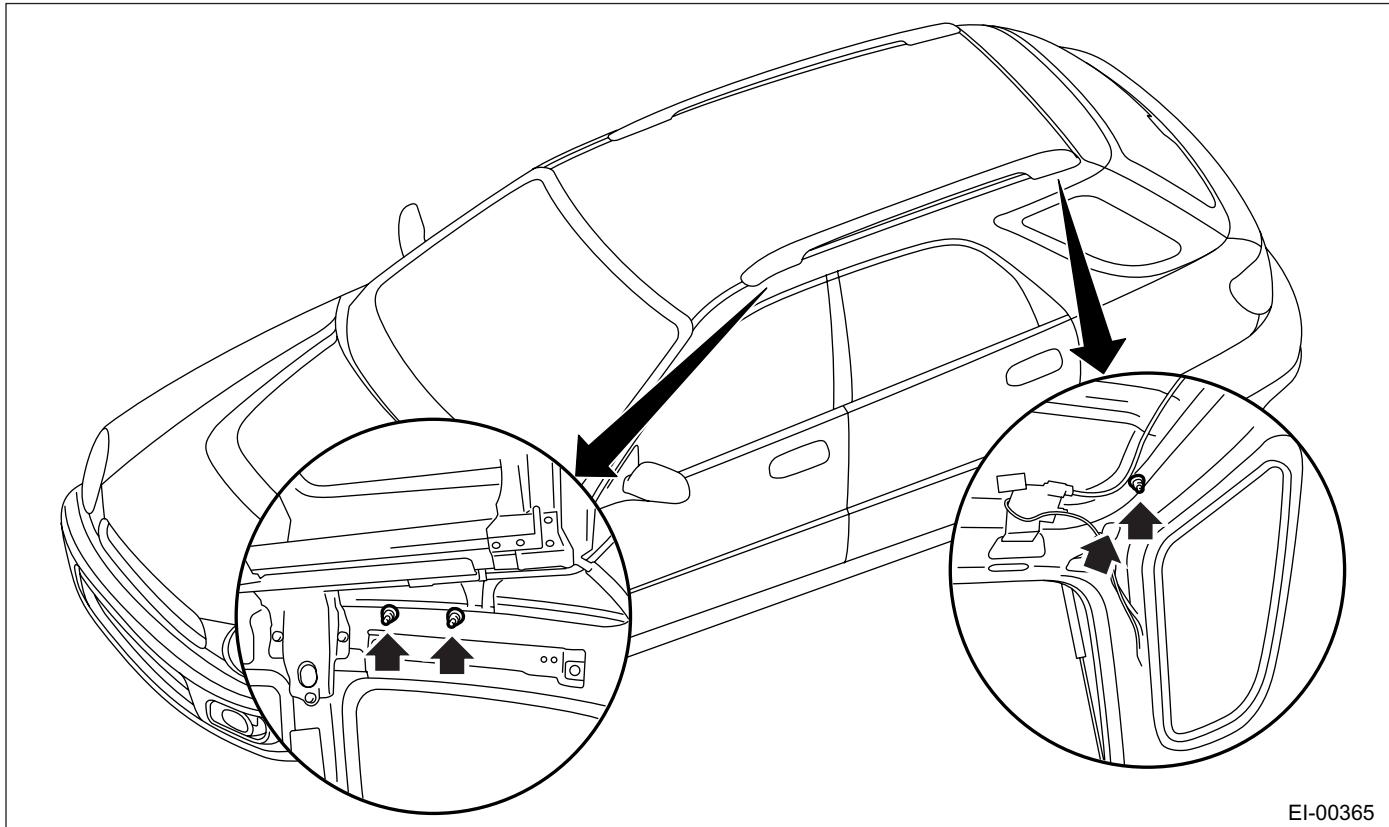

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to scratch the body panels with roof rail stud bolts when removing and installing them.