



16. Console Box

A: REMOVAL


- 1) Disconnect the ground terminal from battery.
- 2) Remove the console cover.

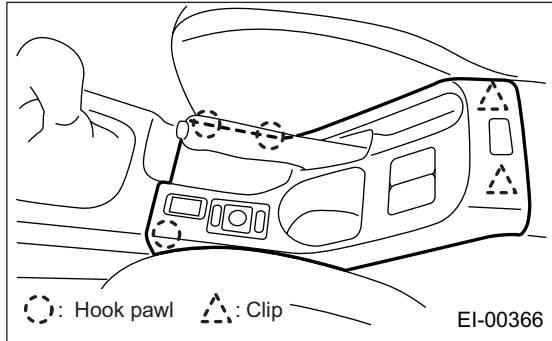

- 3) Remove the shift knob (MT model) and front cover.

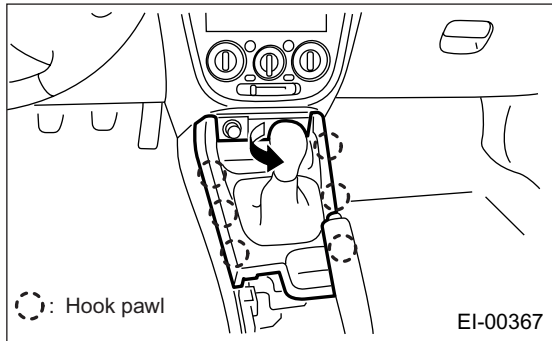

- 4) Loosen the screws to remove the console box.

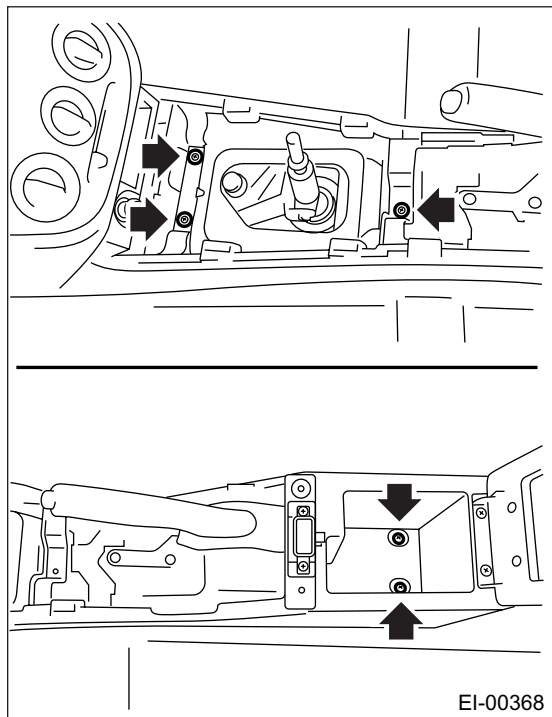

B: INSTALLATION

Install in the reverse order of removal.