


## 18.Upper Inner Trim

### A: REMOVAL

- 1) Remove the lower inner trim. <Ref. to EI-47, REMOVAL, Lower Inner Trim.>
- 2) Remove the front mole (A).
- 3) Remove the front pillar upper trim (B).
- 4) Detach the front seat belt shoulder anchor, then remove the center pillar upper trim (C).

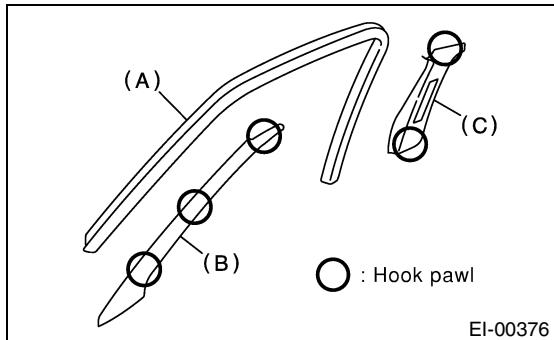

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

**Be sure to securely hook pawls of inner trim panel to body flange.**

#### NOTE:

When installing the center pillar upper trim and front pillar upper trim, be sure to set the front mole as shown in figure.

