


21.Sun Visor

A: REMOVAL

Remove the mounting screws then detach the sun visor (A), hook (B) and center visor (C).

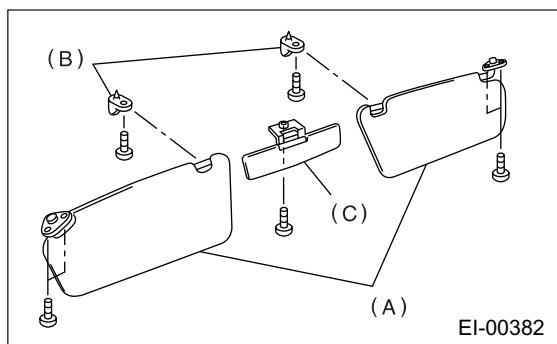

B: INSTALLATION

Install in the reverse order of removal.