


3. Hood Grille


A: REMOVAL

- 1) Remove the four clips of hood insulator.

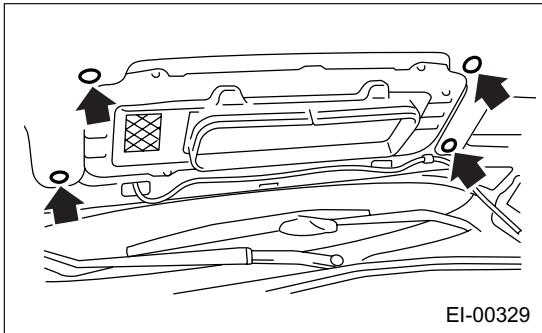


EI-00329

- 2) Remove seven bolts and clip (A) to remove the hood duct.

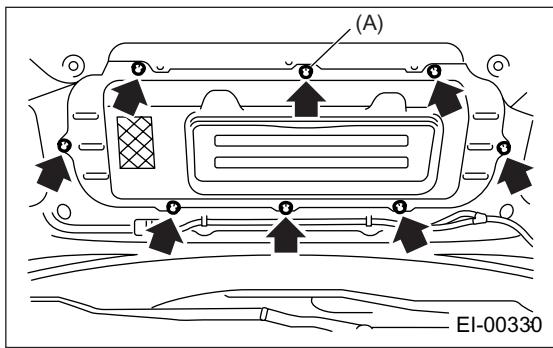


EI-00330

- 3) Remove five nuts.

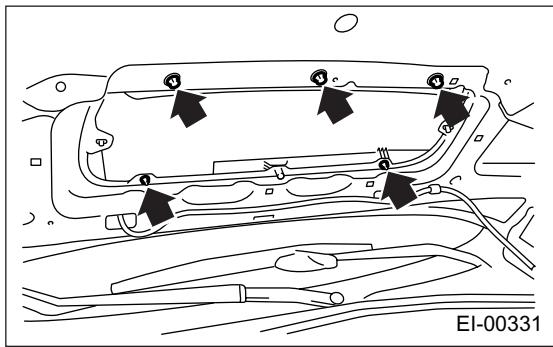


EI-00331

- 4) Remove three white clips and two black clips to remove the hood grille.

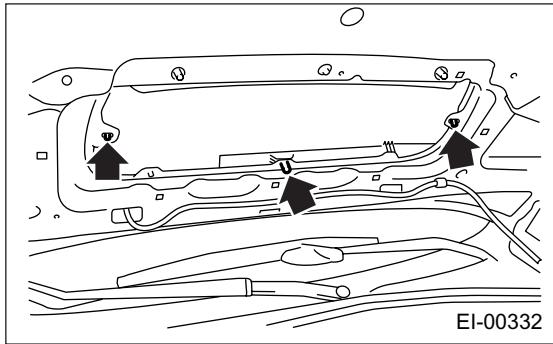

EI-00332

B: INSTALLATION

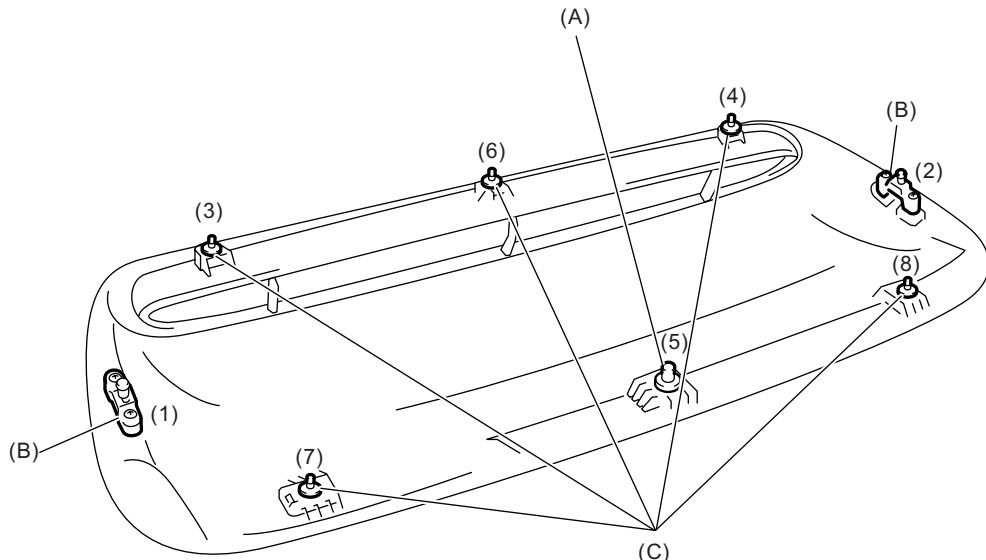


EI-00333

(A) White clip

(B) Black clip

(C) Bolt

1) Replace the black clip (1), (2) with a new one. Install the clip with arrow mark facing the front side of grille (A).

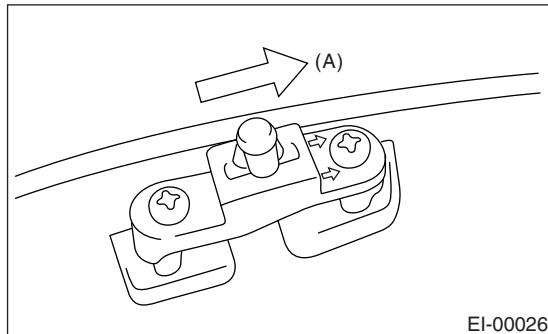

EI-00026

2) Replace the white clip (5) with a new one.


CAUTION:

Do not use foam rubber washer with new white clips.

3) Insert the hood grille clip and engage the three clips.

CAUTION:


Make sure that the anchor portion of each clip is firmly engaged.

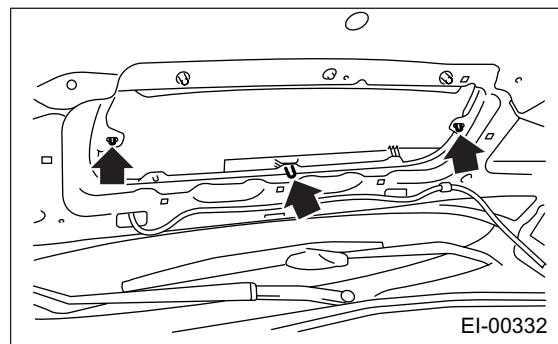

4) Install the five nuts.

Tightening torque:


4.4 N·m (0.45 kgf·m, 3.25 ft-lb)

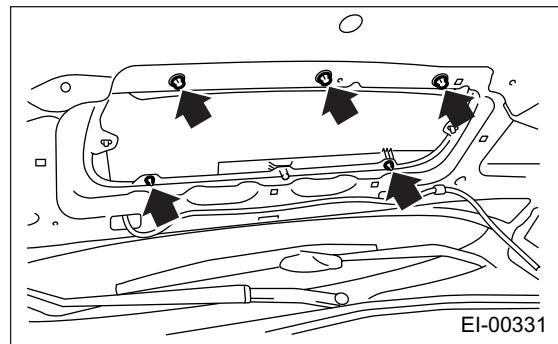


5) Catch the two hooks of hood duct to the hood holes.

HOOD GRILLE


EXTERIOR/INTERIOR TRIM

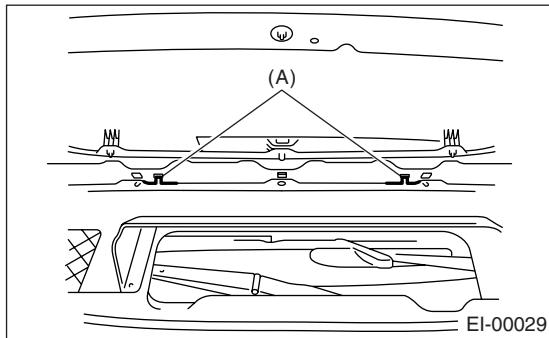

- 6) Install the hood duct with clip (A) and seven bolts.

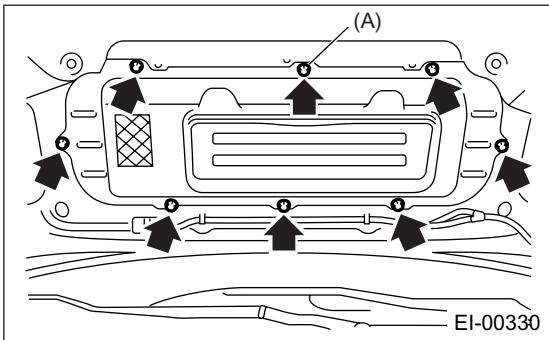

- 7) Install the hood insulator with four new clips.

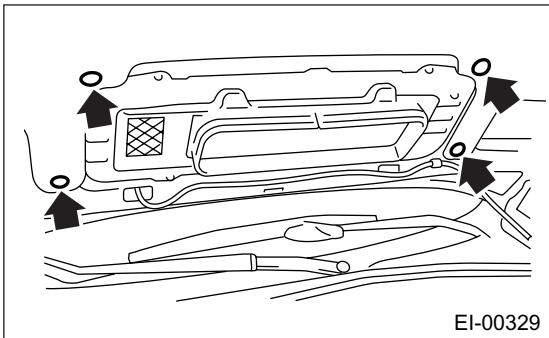

C: INSPECTION

- Make sure that the clip is firmly engaged.
- Make sure that there is no abnormal gap at whole periphery of hood grille.
- Make sure that there is no damage on hood grille.