

## 6. Rear Bumper


### A: REMOVAL

#### 1. WAGON

##### CAUTION:


- Handle the bumper carefully to avoid damage to the bumper face.
- Do not damage the body during removal or installation of bumper.
- To avoid damage to the bumper, lay the removed bumper on sheet spread on the floor. Do not lay it directly on the floor.

- 1) Disconnect the ground terminal from battery.
- 2) Remove the bolts and clips.

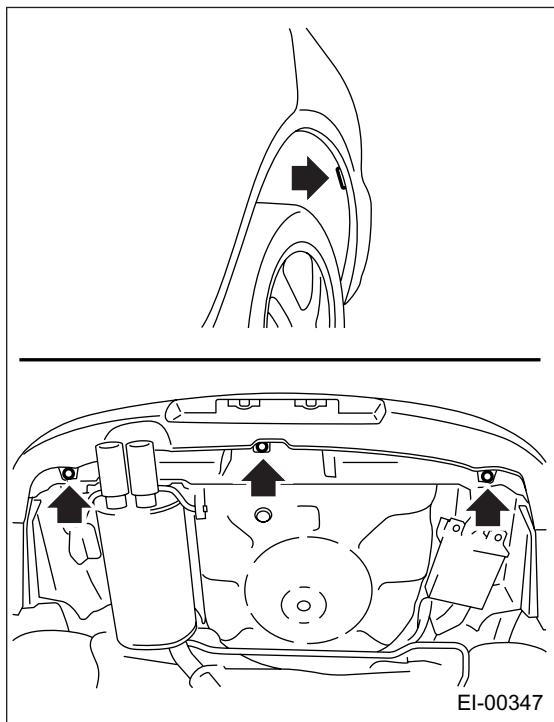


- 3) Remove the rear combination light assembly.  
<Ref. to LI-18, REMOVAL, Rear Combination Light Assembly.>

- 4) Remove the screw and two clips from each side.

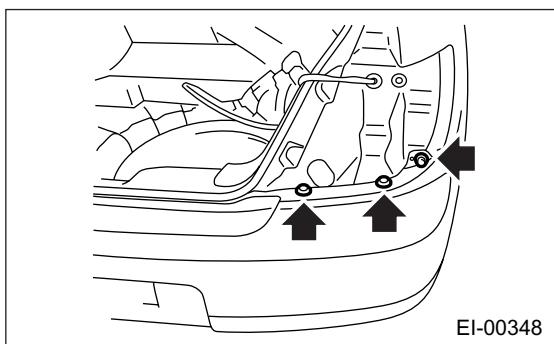


- 5) Remove the floor box.
- 6) Remove the rear skirt trim.

- 7) Pull off the rear end of rear quarter lower trim, and then loosen the two nuts from each side to remove the rear bumper.

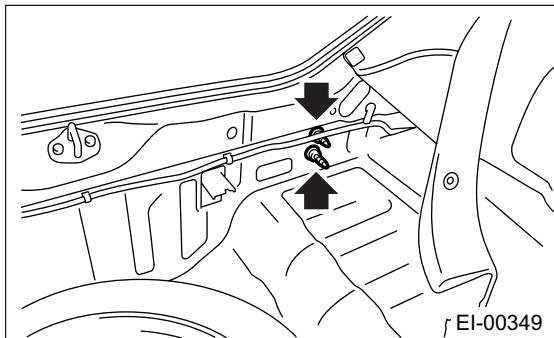


- 8) Loosen the clips to remove the bumper beam.

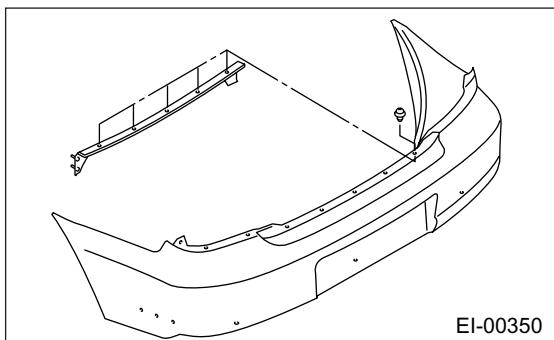


- 9) Remove the E/A FORM from bumper beam.

##### CAUTION:

**E/A FORM may easily break. Do not apply excessive force to it during removal.**

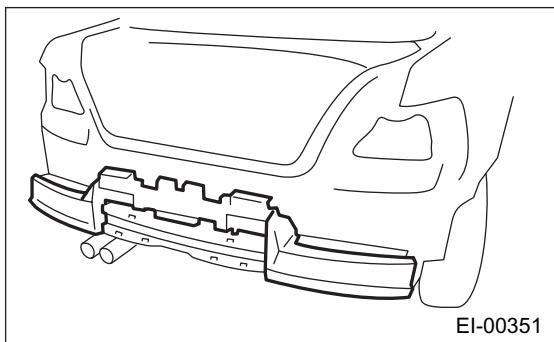


- 10) Remove the bolt.

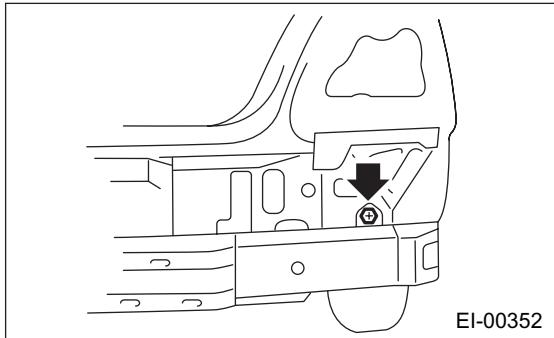

# REAR BUMPER

## EXTERIOR/INTERIOR TRIM

- 11) Remove the canister. <Ref. to EC(H4SO)-5, REMOVAL, Canister.>
- 12) Remove the three bolts, then remove the bumper beam.

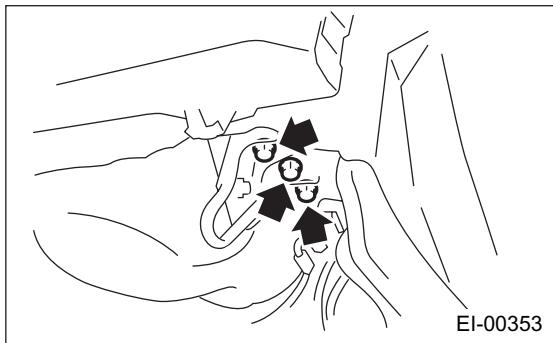

## 2. SEDAN

Refer to rear bumper removal WAGON. <Ref. to EI-31, WAGON, REMOVAL, Rear Bumper.>

## B: INSTALLATION

### 1. WAGON

#### CAUTION:

- Handle the bumper carefully to avoid damage to the bumper face.
- Do not damage the body during removal or installation of bumper.

1) Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to COMPONENT of General Description for tightening torque. <Ref. to EI-6, REAR BUMPER, COMPONENT, General Description.>*

## 2. SEDAN

#### CAUTION:

- Handle the bumper carefully to avoid damage to the bumper face.
- Do not damage the body during removal or installation of bumper.

1) Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to COMPONENT of General Description for tightening torque. <Ref. to EI-6, REAR BUMPER, COMPONENT, General Description.>*

## C: REPAIR

Refer to front bumper repair. <Ref. to EI-24, REMOVAL, Front Bumper.>