


## 7. Mud Guard

### A: REMOVAL

- 1) Jack-up the vehicle.
- 2) Loosen the screws and clips to remove the mud guard.

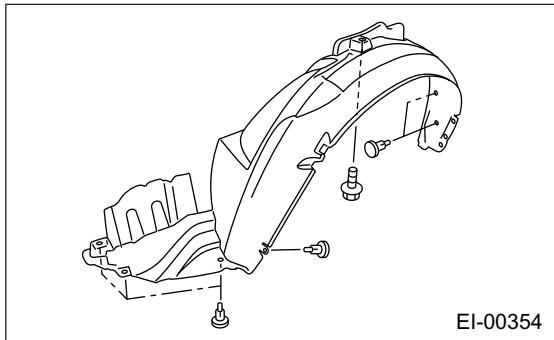

### B: INSTALLATION

Insert the screw grommet into body, and tighten it with screw and clip.