



## 8. Cowl Panel

### A: REMOVAL

- 1) Open the hood.
- 2) Remove the wiper arm. <Ref. to WW-12, REMOVAL, Front Wiper Arm.>
- 3) Remove the front panel seal.

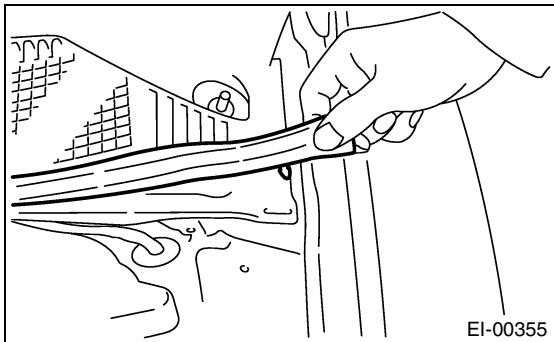

- 4) Loosen the clips to remove the cowl panel.

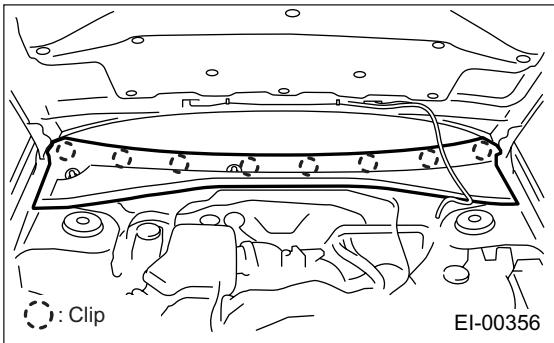

### B: INSTALLATION

Install in the reverse order of removal.