


13. Inner Rearview Mirror

A: REMOVAL


NOTE:

The spring cannot be reused. Prepare a new spring before removal.

- 1) Turn the mirror base 90 degrees clockwise or counterclockwise to remove it.

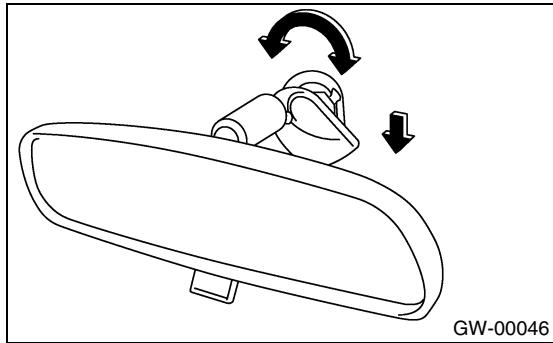

- 2) Remove the spring from the mirror base.

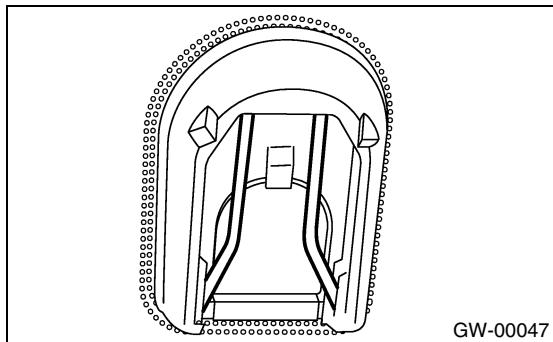

CAUTION:

Be careful not to damage the mirror surface.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Do not let mirror be damaged.

Do not let spring deteriorate.