
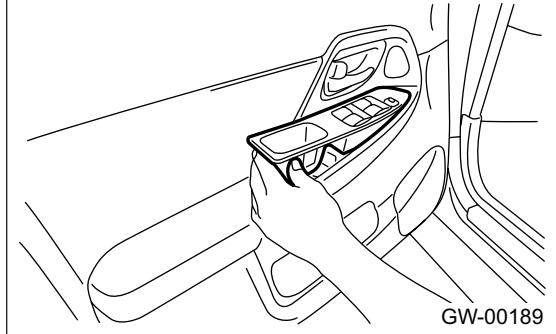


14. Power Window Control Switch

A: REMOVAL


1. MAIN SWITCH

- 1) Disconnect the ground terminal from battery.
- 2) Loosen the screw to remove power window main switch.
- 3) Disconnect the connector.

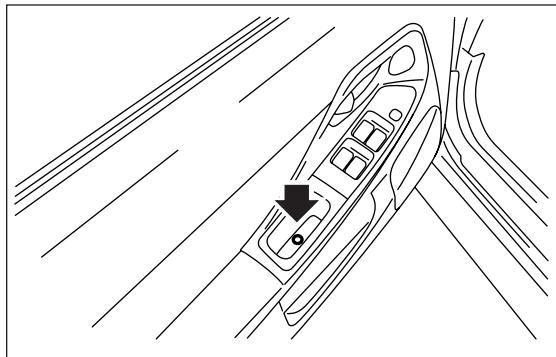

2. SUB-SWITCH

- 1) Disconnect the ground terminal from battery.
- 2) Remove the switch panel.
- 3) Disconnect the connector.

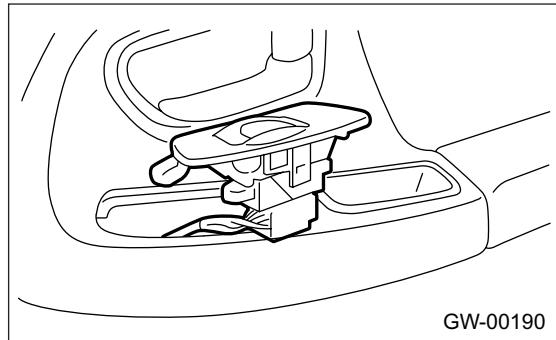

B: INSTALLATION

1. MAIN SWITCH

Install in the reverse order of removal.

2. SUB-SWITCH

Install in the reverse order of removal.

C: INSPECTION

1. MAIN SWITCH

Measure switch resistance.

Driver's switch:

Switch position	Terminal No.	Standard
UP	13 and 2, 1 and 5	less than 1Ω
OFF	1 and 2 1 and 5 2 and 5	less than 1Ω
DOWN	13 and 1, 2 and 5	less than 1Ω
AUTO DOWN	13 and 1, 2 and 5	less than 1Ω

Front passenger's switch:

Switch position	Terminal No.	Standard
UP	13 and 6, 7 and 5	less than 1Ω
OFF	6 and 7 and 5	less than 1Ω
DOWN	13 and 7, 6 and 5	less than 1Ω

POWER WINDOW CONTROL SWITCH

GLASS/WINDOWS/MIRRORS

Rear left switch:

Switch position	Terminal No.	Standard
UP	10 and 13, 9 and 5	less than 1Ω
OFF	10 and 9 10 and 5 9 and 5	less than 1Ω
DOWN	13 and 9, 10 and 5	less than 1Ω

Rear right switch:

Switch position	Terminal No.	Standard
UP	13 and 16, 15 and 5	less than 1Ω
OFF	16 and 15 16 and 5 5 and 15	less than 1Ω
DOWN	13 and 15, 16 and 5	less than 1Ω

If NG, replace the main switch.

2. SUB-SWITCH

Measure switch resistance.

Front passenger's door switch and rear door switch:

Switch position	Terminal No.	Standard
UP	8 and 5, 6 and 7	less than 1Ω
OFF	4 and 5, 6 and 7	less than 1Ω
DOWN	8 and 7, 4 and 5	less than 1Ω

If NG, replace the sub-switch.