



16.Outer Mirror Assembly

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the door trim. <Ref. to EI-38, REMOVAL, Front Door Trim.>
- 3) Remove the mirror gusset cover.

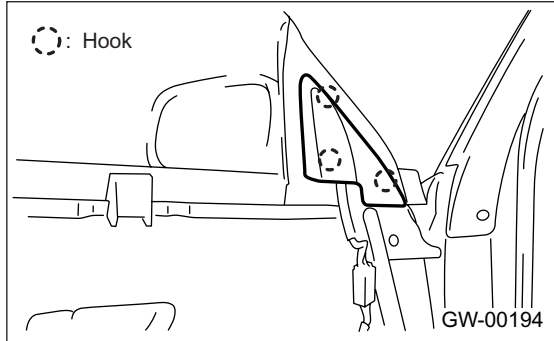

- 4) Disconnect the mirror connector.
- 5) Loosen the screws to remove mirror assembly.

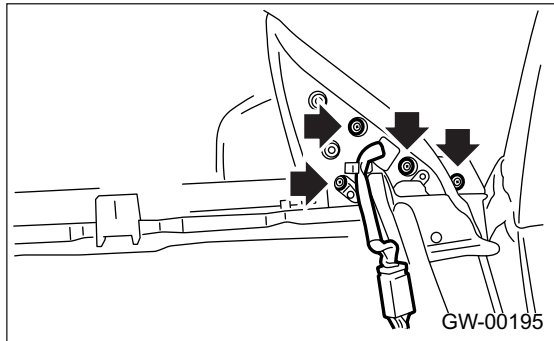


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check to ensure that the rearview mirror moves properly when the battery voltage is applied to terminals.

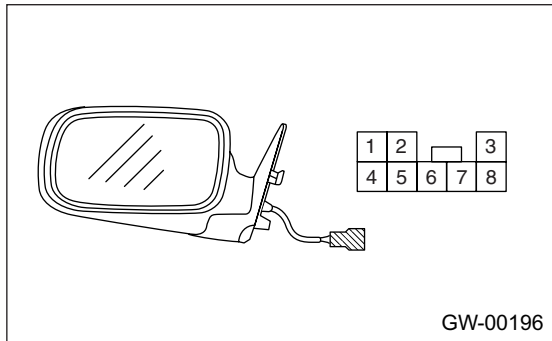

Mirror heater not-equipped model:

Switch position	Terminal No.
OFF	—
UP	4 (+) and 6 (–)
DOWN	6 (+) and 4 (–)
LEFT	5 (+) and 6 (–)
RIGHT	6 (+) and 5 (–)

If NG, replace the mirror.

Mirror heater equipped model:

Switch position	Terminal No.
OFF	—
UP	6 (+) and 8 (–)
DOWN	8 (+) and 6 (–)
LEFT	7 (+) and 8 (–)
RIGHT	8 (+) and 7 (–)

If NG, replace the mirror.