


18. Remote Control Mirror Switch

B: INSTALLATION

Install in the reverse order of removal.

A: REMOVAL

- 1) Disconnect the ground terminal from battery.
- 2) Remove the console cover.
- 3) Disconnect the connector.

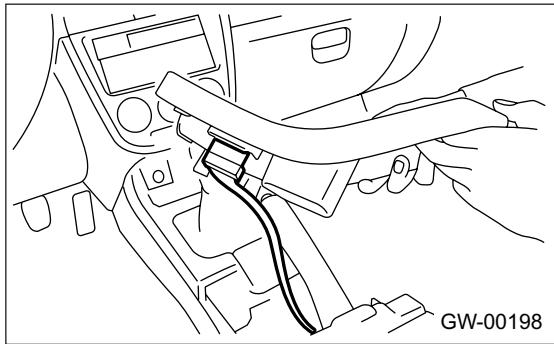


REMOTE CONTROL MIRROR SWITCH

GLASS/WINDOWS/MIRRORS

C: INSPECTION

Move the rearview mirror switch to each position and measure switch resistance.

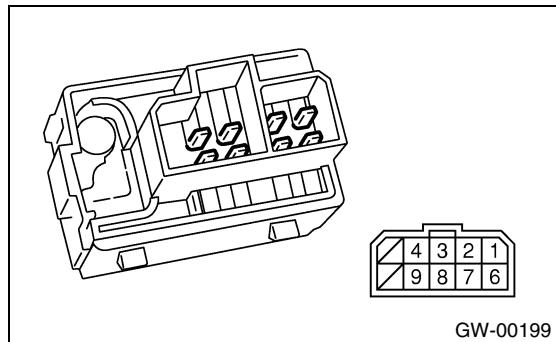

Change over switch left position:

Switch position	Terminal No.	Standard
OFF	All terminal	more than $1M\Omega$
UP	4 and 6, 2 and 1	less than 1Ω
DOWN	6 and 2, 4 and 1	less than 1Ω
LEFT	4 and 8, 2 and 1	less than 1Ω
RIGHT	8 and 2, 4 and 1	less than 1Ω

Change over switch right position:

Switch position	Terminal No.	Standard
OFF	All terminal	more than $1M\Omega$
UP	4 and 7, 2 and 1	less than 1Ω
DOWN	7 and 2, 4 and 1	less than 1Ω
LEFT	4 and 9, 2 and 1	less than 1Ω
RIGHT	9 and 2, 4 and 1	less than 1Ω

If NG, replace the switch.