



7. Rear Door Glass

A: REMOVAL


- 1) Remove the rear door trim. <Ref. to EI-39, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Rear Sealing Cover.>
- 3) Remove the stabilizer and trim hooks.

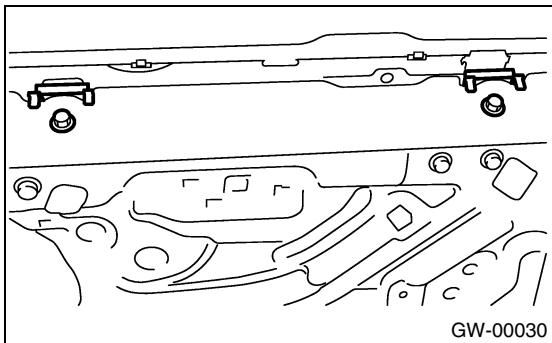


- 4) Remove front end and rear end of the door weather strip.

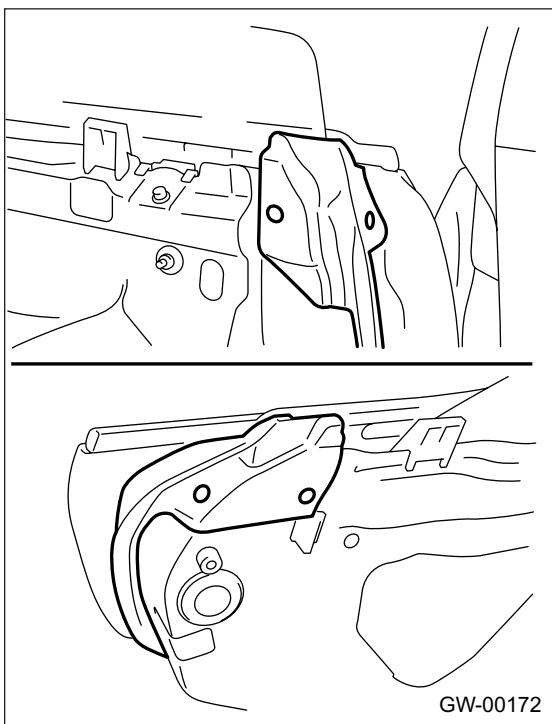

- 5) Loosen two screw to remove weather strip outer.

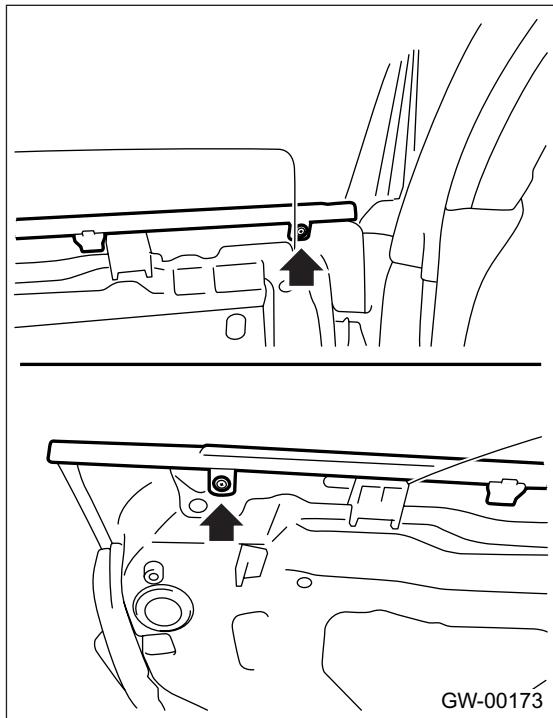

- 6) Operate the power window switch to remove glass as shown in the figure, and remove two nuts.

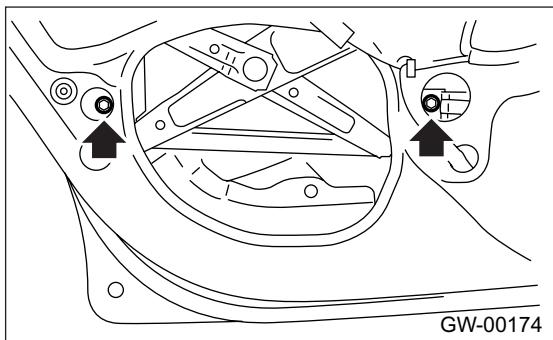

- 7) Loosen two rear sash installation nuts, and move the rear sash backward.

- 8) Remove the glass.

CAUTION:

Avoid impact and damage to the glass.

REAR DOOR GLASS

GLASS/WINDOWS/MIRRORS

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:

Make sure that glass stay is placed securely in sash.

2) Adjust rear door glass. <Ref. to GW-16, ADJUSTMENT, Rear Door Glass.>


- After adjustment, move glass up and down to check whether it is caught.

C: ADJUSTMENT

NOTE:

The rear door glass, as a rule, should be adjusted in the same manner as front glass, although they are different in dimension. Special notes for rear glass are given below.

1) Adjust the glass position using the following dimensions as a guide line.

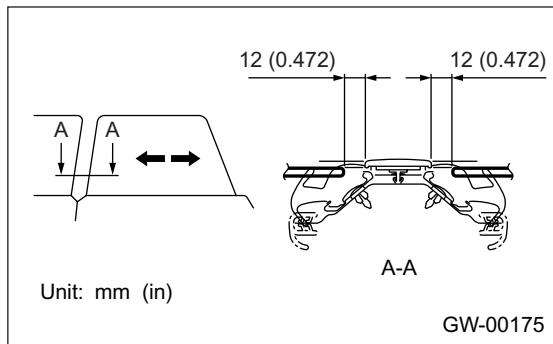


CAUTION:

• If dimensions are smaller than the given dimensions, glass may get caught in weatherstrip during lifting/lowering operation. In the worst case, it may cause glass not to be opened fully.

• After adjustment, move glass up and down to check whether it is caught.

2) Adjust the crimp of glass using the following dimensions as a guide line.

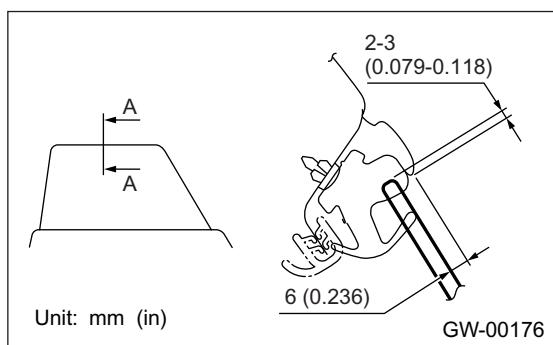

CAUTION:

• If crimp of rear glass is higher than necessary, glass may get caught in weatherstrip of center pillar corner, resulting in early wear of weatherstrip. Be careful when adjusting.