

CONTROL UNIT


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Control Unit


A: REMOVAL

1) Disconnect the ground terminal from battery.


- 2) Remove the glove box. <Ref. to EI-40, REMOV-AL, Glove Box.>
- 3) Remove the lower panel. <Ref. to EI-43, Instru-ment Panel Assembly.>
- 4) Remove the control wires.

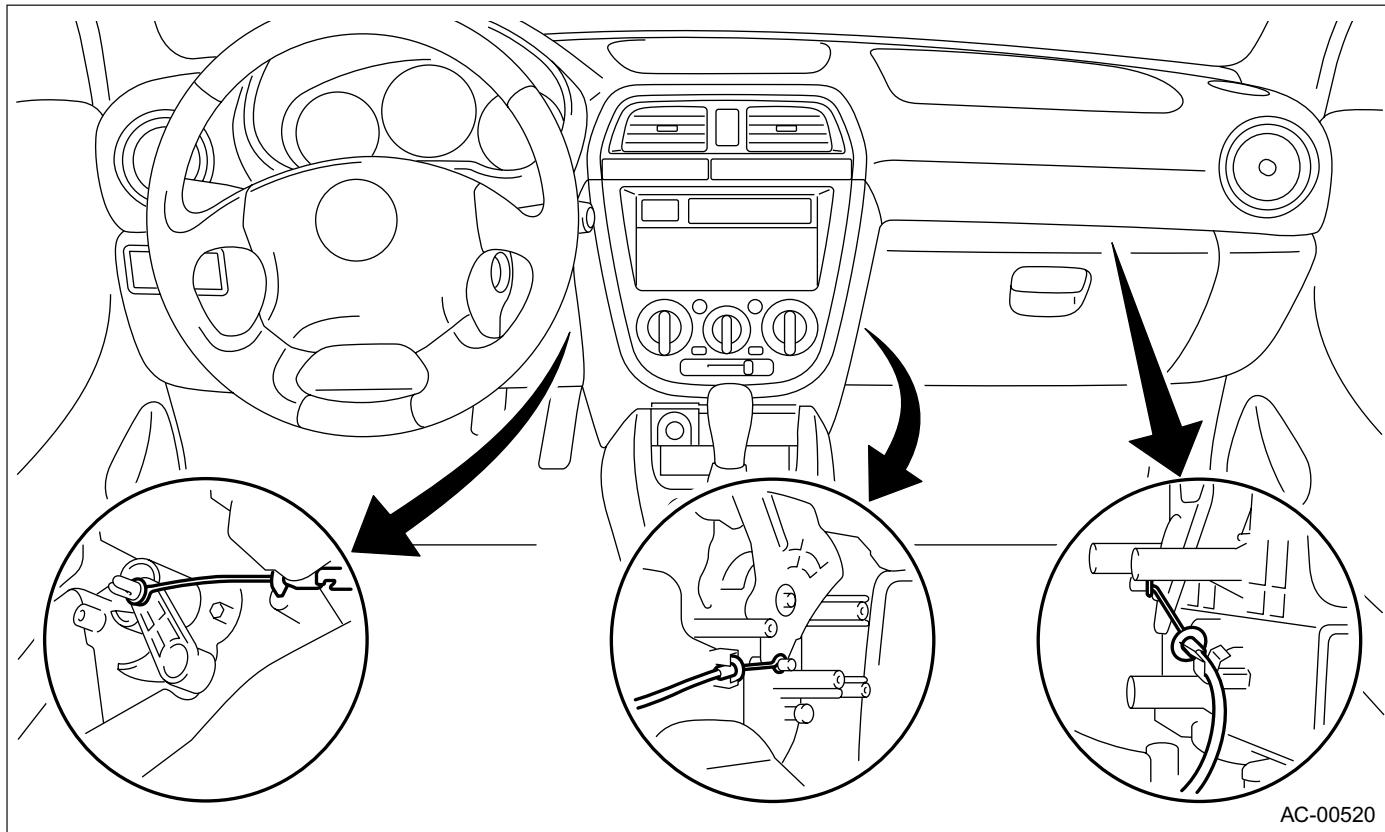

5) Remove the center console panel.

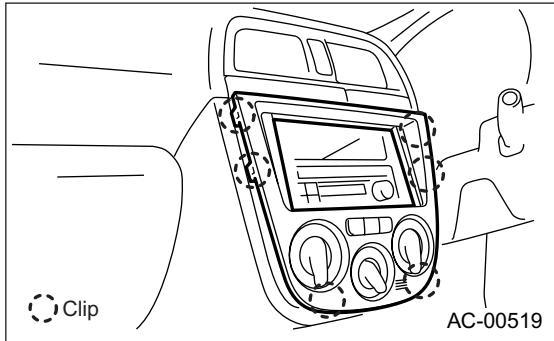

6) Remove four screws.

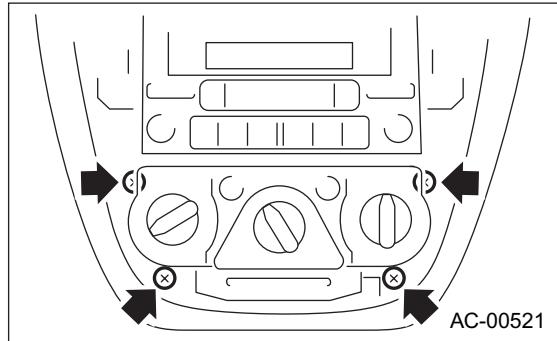

7) Pull out the control unit and disconnect connectors.

B: INSTALLATION

Install in the reverse order of removal.