



12. Condenser

A: REMOVAL


- 1) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-16, OPERATION, Refrigerant Recovery Procedure.>
- 2) Disconnect the ground terminal from battery.
- 3) Disconnect the pressure hose and pipe from condenser.

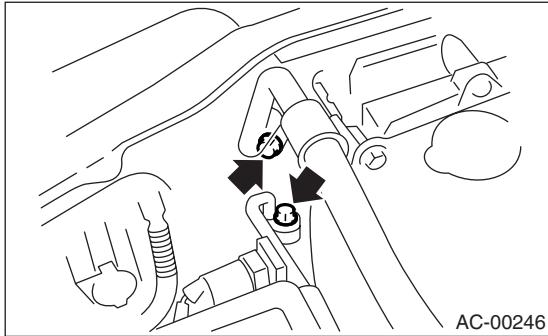

- 4) Remove the radiator bracket (A).

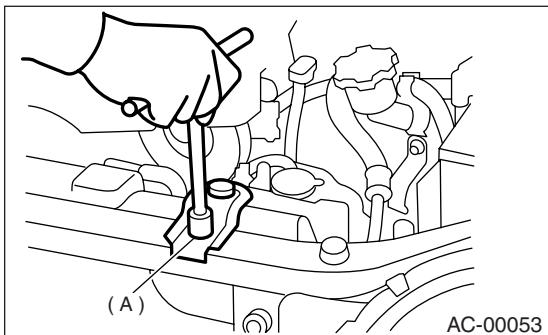

- 5) Remove two bolts. While lifting condenser, pull it out through space between the radiator and the radiator panel.

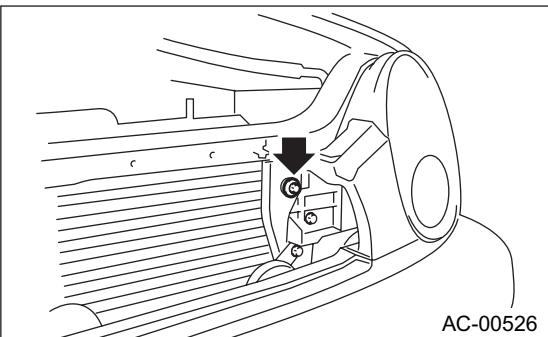

CAUTION:

Be careful not to damage the condenser fins. If a damaged fin is found, repair it using a thin screwdriver.


If the condenser is replaced, add appropriate amount of compressor oil to the compressor. <Ref. to AC-21, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Replace the O-rings on hoses or pipes with new ones, and then apply compressor oil. Confirm that lower guide of condenser (A) has been fitted into holes on radiator panel.

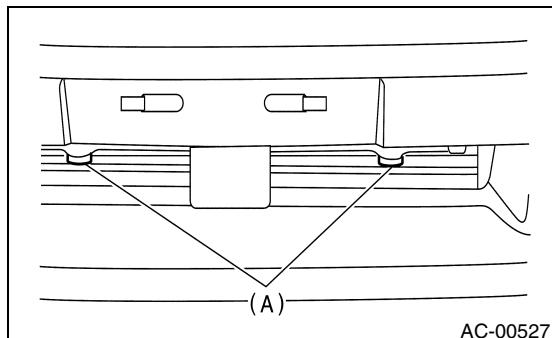

- 2) Charge refrigerant. <Ref. to AC-17, OPERATION, Refrigerant Charging Procedure.>

C: INSPECTION

- 1) Confirm that no dust or insects are found on the condenser fins. Air-blow or flush fins with water as needed.

- 2) Confirm that no oil leaks from condenser. If a failure is found, replace the condenser with a new one.