


RELAY AND FUSE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

16. Relay and Fuse

A: LOCATION

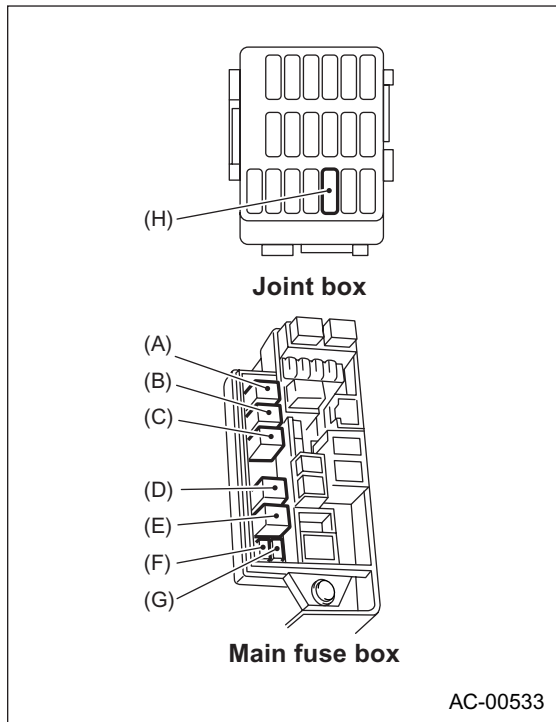


Non-turbo model

Main Fan Relay	A
Sub Fan Relay	C
A/C Relay	D
Main Fan Fuse	F
Sub Fan Fuse	G
A/C Fuse	H

Turbo model

Main Fan Relay 1	A
Main Fan Relay 2	B
Sub Fan Relay 1	C
Sub Fan Relay 2	E
A/C Relay	D
Main Fan Fuse	F
Sub Fan Fuse	G
A/C Fuse	H

B: INSPECTION

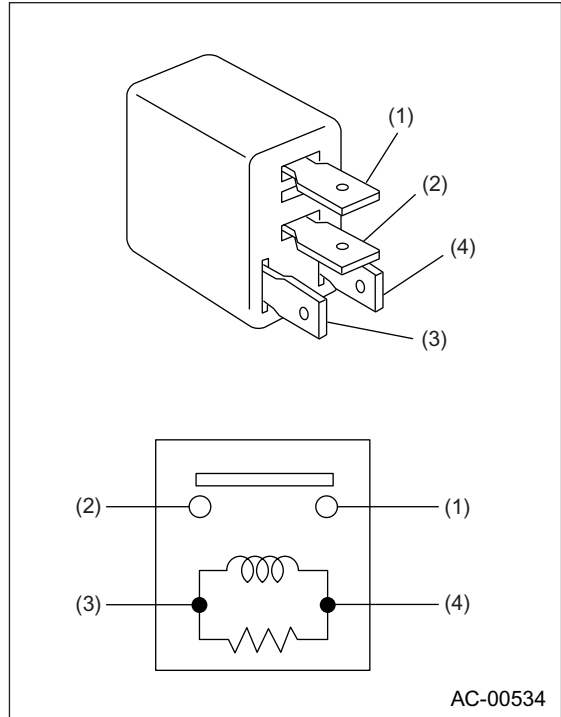

(3) — (4): Continuity exists.

(1) — (2): No continuity

While applying battery voltage to the cable between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new one.