


### 17. Pressure Switch (Dual Switch)

#### A: INSPECTION

- 1) Connect the manifold gauge to the service valve on the high-pressure side.
- 2) Remove the pressure switch harness connector. Using a circuit tester, inspect the ON-OFF operation of the pressure switch.

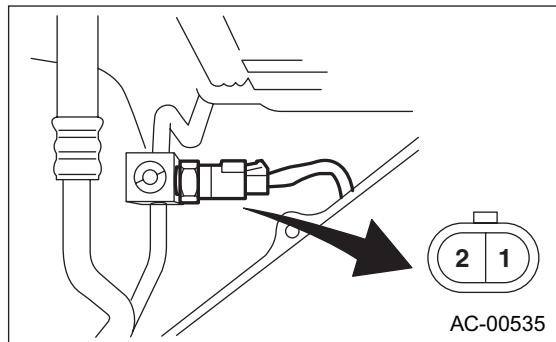

	Terminal No.	Operation	Standard kPa (kg/cm <sup>2</sup> , psi)
High and low pressure switch	1 and 2	Turns OFF.	Increasing to 2,800 $\pm$ 100 (29 $\pm$ 1, 406 $\pm$ 15) Decreasing to 278 $\pm$ 29 (2.83 $\pm$ 0.3, 40.3 $\pm$ 4.2)
			Increasing to 287 $^{+39}_{-25}$ (2.9 $^{+0.4}_{-0.25}$ , 42 $^{+5.7}_{-3.6}$ ) Decreasing to 2,200 $\pm$ 200 (22.4 $\pm$ 2, 319 $\pm$ 29)
		Turns ON.	