


HEATER DUCT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

19.Heater Duct

A: REMOVAL

- 1) Remove the heater unit. <Ref. to AC-29, Removal.>
- 2) Remove the front seat. <Ref. to SE-6, REMOVAL, Front Seat.>
- 3) Remove the front side sill cover.
- 4) Pull off the floor mat to remove the heater duct.

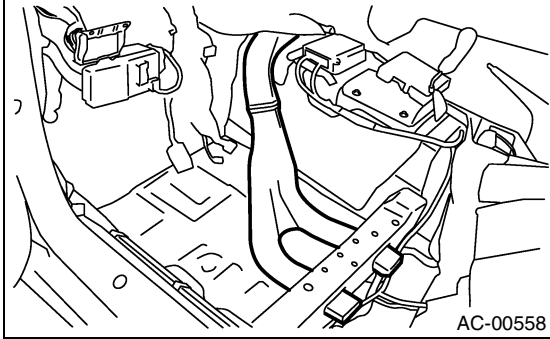

B: INSTALLATION

Install in the reverse order of removal.