

## GENERAL DIAGNOSTICS

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 21. General Diagnostics

#### A: INSPECTION

Symptom		Repair order
Blower motor	Doesn't move.	Fuse
		Blower motor relay
		Blower motor
		Blower motor resistor
		Blower switch
		Wire harness
	Strange noise.	Blower motor
Compressor	Doesn't move.	Refrigerant
		Fuse
		Air conditioning relay
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wire harness
	Strange noise	V-Belt
		Magnet clutch
		Compressor
Cold air not emitted.		Refrigerant
		V-Belt
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wire harness
		Heater duct
Warm air not emitted.		Heater vent duct
		Engine coolant
		Blower switch
		Heater core
Temperature of air from vents does not change.		Engine coolant
		Mode actuator
		Wire harness
		Mode actuator
Unable to switch blow vents.		Air flow switch
		Wire harness
		Air inlet select switch
Unable to switch suction vents.		FRESH/RECIRC actuator
		Wire harness

## **GENERAL DIAGNOSTICS**

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---