


BLOWER MOTOR UNIT ASSEMBLY

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


7. Blower Motor Unit Assembly

A: REMOVAL


- 1) Disconnect the ground terminal from battery.
- 2) Remove the glove box. <Ref. to EI-40, REMOV-AL, Glove Box.>
- 3) Loosen the nut to remove support beam stay.

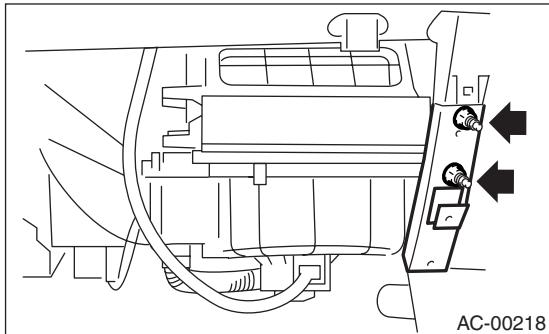


- 4) Disconnect the blower motor connector.

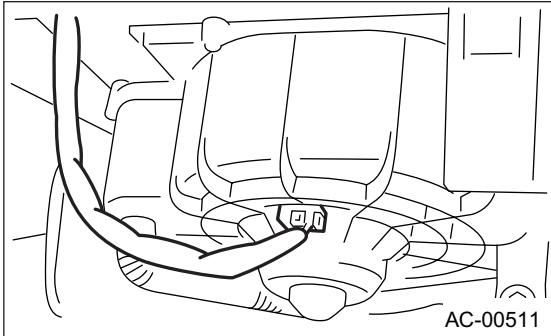

- 5) Disconnect the blower resistor connector.

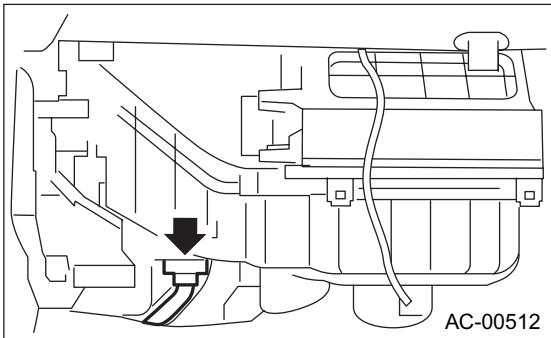

- 6) Loosen the bolt and nut to remove blower motor unit assembly.

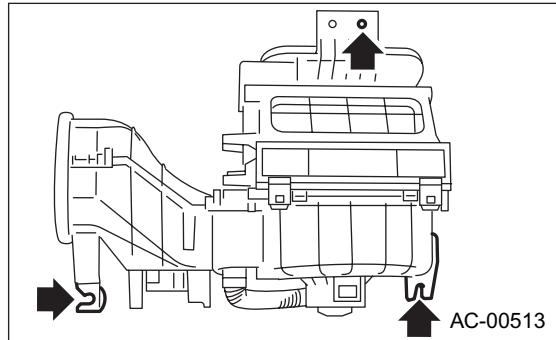

BLOWER MOTOR UNIT ASSEMBLY

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Connect the motor connector terminal 1 from the battery to the positive (+) lead and terminal 2 to the negative (-) lead. Make sure the motor runs smoothly.

