


BLOWER RESISTOR

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

8. Blower Resistor

A: REMOVAL


- 1) Remove the glove box. <Ref. to EI-40, REMOV-AL, Glove Box.>
- 2) Disconnect the blower resistor connector.
- 3) Loosen two screws to remove the blower resistor.

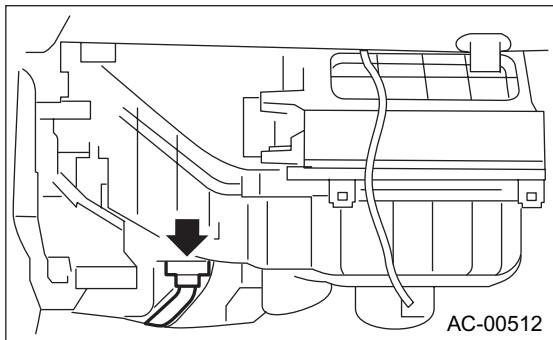

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

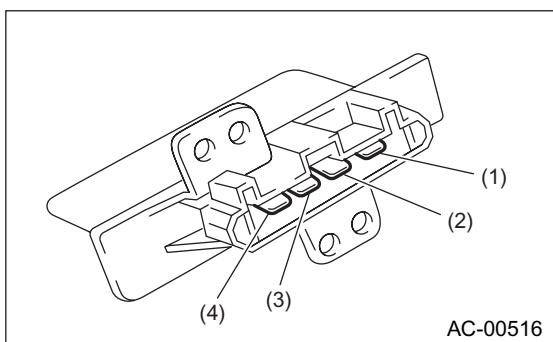

Measure the blower resistor resistance.

Terminal No.	Standard
3 and 1	Approx. 0.31 Ω
3 and 2	Approx. 2.04 Ω
3 and 4	Approx. 0.88 Ω

If NG, replace the blower resistor.