



9. Heater Core

A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-29, REMOVAL, Heater and Cooling Unit.>
- 2) Loosen the screws to remove heater core cover.

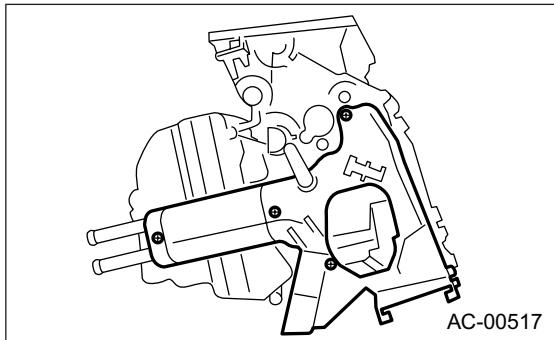

- 3) Remove the heater core.

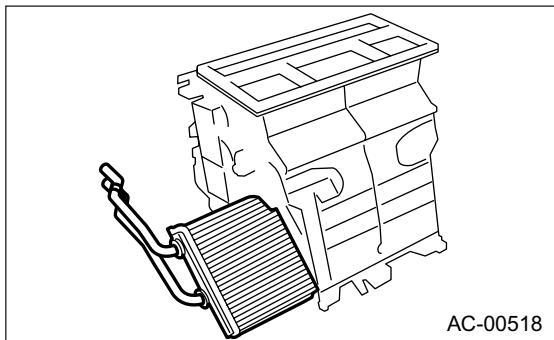

B: INSTALLATION

Install in the reverse order of removal.